

# CVWEDIV

**DIGITAL CAMERA** 

D-560ZOOM C-350ZOOM

**X-200** 

REFERENCE MANUAL

<Click Here>

CAMERA OPERATION MANUAL

 $\label{prop:eq:explanation} \textbf{Explanation of digital camera functions and operating instructions}.$ 

DIGITAL CAMERA - PC CONNECTION
OPERATION MANUAL

Explanation of how to download images between your digital camera and PC.



## CAMEDIA DIGITAL CAMERA

## D-560ZOOM C-350ZOOM X-200

### REFERENCE MANUAL



- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- Screen and camera illustrations shown in this manual may differ from those of the actual product.

#### For customers in North and South America

#### For customers in USA

Declaration of Conformity

Model Number : D-560ZOOM/C-350ZOOM/X-200

Trade Name : OLYMPUS

Responsible Party : Olympus America Inc.

Address : 2 Corporate Center Drive, Melville, New York

11747-3157 U.S.A.

Telephone Number : 631-844-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

#### For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.

#### **Trademarks**

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Computer Inc.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

	Contents	P.4	
Introduction of the camera's	Getting started	P.8	1
functions.	About the menus	P.31	2
For shooting and learning the basic operations.	Shooting basics	P.40	3
For fine- tuning the settings to get that particular shot.	Advanced shooting	P.61	4
For playing back and arranging pictures.	Playback	P.78	5
Settings that make the camera easier to operate.	Useful functions	P.96	6
Printing pictures.	Print setting	P.108	7
Troubleshooting and other information.	Miscellaneous	P.117	8
	Specifications	P.131	
	Glossary of terms	P.133	
	Index	P.135	

## Contents

Contents	4
1 Getting started	8
Names of parts	8
Camera	
Monitor indications	
How to use this manual	13
Attaching the strap	14
Loading the batteries	15
Selecting optional batteries or an AC adapter	17
Inserting a card	19
Card basics	19
Removing the card	
Power on/off	
If the card is not recognized (card check)	
Selecting a language 🖳	
Setting the date and time	
Holding the camera	30
2 About the menus	31
Types of menus	31
How to use the menus	
Shortcut menus	
Shooting mode	
Playback mode	
Mode Menus	
Shooting mode	
Playback mode	


3 Shooting basics	40
Shooting mode	40
Taking still pictures PH0T0	43
Taking still pictures using the viewfinder	43
Taking still pictures using the monitor	45
Comparison of the viewfinder & monitor	
If correct focus cannot be obtained	48
Determine the position of the subject after focusing	
(Focus Lock)	
Subjects that are difficult to focus on	
Night scene mode 🖢	
Recording movies 🖾	
Zoom	
Using the optical zoom	
Using the flash 4	
Osing the hash $\frac{1}{2}$	50
4 Advanced shooting	61
Macro mode shooting 🕷	61
Self-timer shooting (*)	
Selecting the metering area	
Sequential shooting	
PANORAMA	66
Taking two-in-one pictures 2 IN 1	68
Selecting a record mode <b>∢i</b>	
Varying the image brightness (Exposure compensation)	74
Adjusting the white balance WB	76

5 Playback	78
Viewing still pictures <b>▶</b>	78
QUICK VIEW	
Close-up playback Q	
Index display	
Selecting the number of pictures	
Slideshow 🖺	
Playback on a TV	84
Picture rotation 🕆	
MOVIE PLAY - Viewing movies ▶	86
Protecting pictures On	
Erasing pictures 🕯	89
Single-frame erase	89
All-frame erase	90
Editing still pictures	91
Creating black and white pictures	92
Creating sepia-toned pictures	92
Resizing 🖼	
INDEX - Creating an index	94
6 Useful functions	96
MODE RESET - Reset the settings you changed	06
ALL RESET - Saving the camera's settings	
CARD SETUP - Formatting cards [7]	
Displaying shooting information INFO	
Adjusting the monitor brightness	
REC VIEW	103
Turning the beep sound off •I))	
FILE NAME	105
PIXEL MAPPING.	
VIDEO OUT - Video output selection	
VIDEO OOT - VIGCO Output Sciection	101

How to print pictures 且 All-frame reservation 凸 Single-frame reservation 口 Resetting print reservation data 凸  8 Miscellaneous	80
8 Miscellaneous 1	110 112
	17
Error codes Troubleshooting. The camera does not work The image quality is poor List of menus List of factory default settings List of items by shooting mode Camera maintenance Specifications Glossary of terms	118 118 122 124 128 129 130


## Names of parts


#### Camera

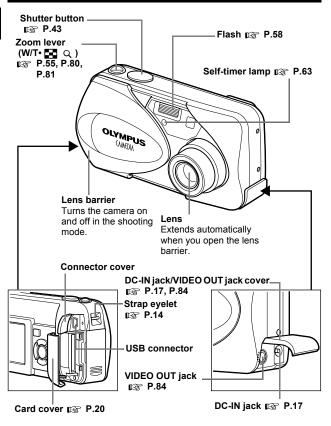


#### Arrow pad

 Buttons on the arrow pad have their respective functions. They are also used as direction buttons. 3, 5, 6 and 6 indicate which button to be pressed.



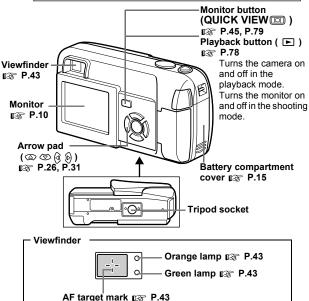

### Shooting mode

 

-11

-12

\_13

-14

-15


\_16

	Items	Indications	Ref. Page
1	Scene select/movie	P, 🔊, 🟊, 🔊, 🎎, 🛱	P.40
2	Battery check		P.12
3	Green lamp	0	P.43
4	Flash standby Camera movement warning/ Flash charge	\$ (lit) \$ (Blinks)	P.43
5	Macro mode	*	P.61
6	Flash mode	<b>③</b> , <b>\$</b> , <b>③</b>	P.58
7	Sequential shooting	_ 	P.65
8	Self-timer	৩	P.63
9	Record mode	SHQ, HQ, SQ1, SQ2	P.70
10	Resolution	2048×1536, 1024×768, 640×480, etc.	P.70
11	Metering	•	P.64
12	Exposure compensation	-2.0, -1.5, -1.0, -0.5, +0.5, +1.0, +1.5, +2.0	P.74
13	White balance	※, 凸, <u>赤</u> , 崇	P.76
14	AF target mark	[]	P.43
15	Memory gauge	<b>, , , ,</b>	P.12
16	Number of storable still pictures Seconds remaining	15 36"	P.45 P.53

#### Playback mode

 INFO setting allows you to select how much information to display on the monitor. Screens when the Information display is set to ON are shown below.

""Displaying shooting information" (P.101)



	Items	Indications	Ref. Page
1	Print reservation, Number of prints	凸 × 10	P.110
2	Battery check	<b>.</b>	P.12
3	Protect	Om	P.88
4	Record mode	SHQ, HQ, SQ1, SQ2	P.70
5	Resolution	2048×1536, 1024×768, 640×480, etc.	P.70
6	Exposure compensation	-2.0, -1.5, -1.0, -0.5, +0.5, +1.0, +1.5, +2.0	P.74
7	White balance	WB AUTO, ※, 凸, 点, 崇	P.76
8	Date and time	'03.04.01 12:00	P.28
9	File number (still picture) Playing time/Total recording time (movie)	100-0016 0"/15"	-
10	Movie	₩	P.86




 The indications that appear on a movie picture that has been selected and displayed from the index display are different from those that appear when the movie picture is displayed using the movie playback function.

#### Memory gauge

 
The memory gauge lights up when you take a picture or record a movie. While the gauge is lit, the camera is storing the picture or the movie on the card. The memory gauge indication changes as shown below depending on the shooting status.

If the memory gauge is fully lit, wait a few seconds until it goes off to take the next shot.

#### When taking still pictures




#### When recording movies

 


#### Battery check

 If the remaining battery power is low, the battery check indication on the monitor changes as follows while the camera is turned on.



### How to use this manual

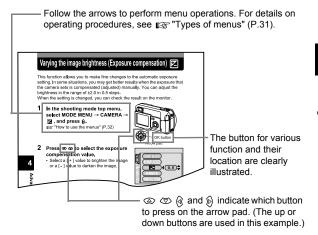

This sample page is only for your reference. It may differ from the actual instructions in this manual.

#### Indications used in this manual



Important information on factors which may lead to a malfunctions or operational problems. Also warns of operations that should be absolutely avoided.



Useful information and hints that will help you get the most out of your camera.

Reference pages describing details or associated information.

## Attaching the strap

- Thread the short end of the strap through the strap eyelet.
- 2 Thread the long end of the strap through the loop that has already gone through the eyelet.



3 Pull the strap tight, making sure that it is securely fastened and does not come loose.





- Be careful with the strap when you carry the camera, as it can easily catch on stray objects, causing serious damage.
- Attach the strap correctly following the procedure so that the camera does not fall off. If the strap is attached incorrectly and the camera falls off, Olympus is not responsible for any damages.

## Loading the batteries

This camera uses 1 CR-V3 lithium battery pack or 2 AA (R6) alkaline batteries or NiMH batteries.

#### Important -


- · CR-V3 lithium battery cannot be recharged.
- Do not peel off the label from a CR-V3 lithium battery pack.
- · Manganese (zinc-carbon) batteries cannot be used.

#### 1 Make sure that:




## 2 Slide the battery compartment cover in the direction of (A).

- The battery compartment cover is unlocked and opened in the direction of (B).
- Use the ball of your finger to slide the cover. Do not use your fingernail as this could result in injury.

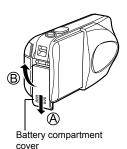

## 3 Insert the batteries, making sure that they are correctly oriented as shown in the illustration.

When using AA (R6) batteries

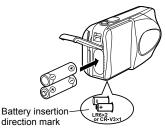

There is a mark showing the correct way to insert the AA batteries on the bottom of the camera

When using a CR-V3 lithium battery pack



When using a CR-V3 lithium battery pack, Insert it in the direction as shown in the illustration

- 4 Close the battery compartment cover, and press it down (C) and slide it in the direction shown (D).
  - If the battery compartment cover seems hard to close, do not force it.
     With the battery compartment cover shut, press the mark firmly and push in the direction shown in the illustration





• If the camera is left for about 30 minutes with the batteries removed, the date and time settings will revert to the factory default settings.

Note

#### - Precautions when using batteries -

The amount of power consumed varies considerably depending on the operations performed on the digital camera. If you use exhausted batteries or alkaline batteries, the camera may turn off without displaying the battery level warning (P.12).

#### Selecting optional batteries or an AC adapter

In addition to the batteries provided with the camera, the following types of battery or AC adapter can be used. Choose the power source best suited to the situation.

#### CR-V3 lithium battery pack (Not rechargeable)

Since the CR-V3 lithium battery pack has a long service life, it is convenient when traveling.

#### NiMH batteries (Rechargeable batteries)

Olympus NiMH batteries are rechargeable and economical. However, charging the batteries repeatedly before using up their capacity will shorten the life of the batteries per charge gradually.

#### ● AA (R6) alkaline batteries


When you need batteries in a hurry, you can use AA (R6) alkaline batteries, which are easy to obtain anywhere. However, the number of pictures that you can take may vary considerably depending on the battery manufacturer, shooting conditions, etc. Turn off the monitor whenever possible to save power.

#### AC adapter

An optional Olympus CAMEDIA-brand AC adapter allows you to power your digital camera from a common AC wall outlet. Be sure to use the specified AC adapter. An AC adapter is useful for time-consuming tasks such as image downloads.

Use an AC adapter designed to operate on the AC voltage in the area the camera is being used.

Consult your nearest Olympus dealer or Service center for details.

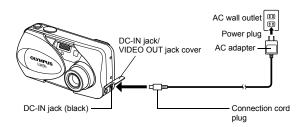



- · Manganese (zinc-carbon) batteries cannot be used.
- If the battery power runs out while the camera is connected to a PC, the image data may be lost or damaged. You are recommended to use the AC adapter when transferring images to a PC. Do not connect or disconnect the AC adapter while the camera is communicating with the PC.
- Do not remove or load the batteries or connect or disconnect the AC adapter while the camera is turned on. Doing so could affect the camera's internal settings or functions.
- The life of battery packs may vary according to the type of battery, manufacturer, shooting conditions, etc.
- Power is consumed continuously during the conditions below. This could shorten the life of the batteries.
  - When the monitor is in the playback mode for an extended period of time
  - · Repeated zoom adjustments.
  - Repeated auto-focus by depressing the shutter button halfway.
    When the camera is connected to a PC.
- · Carefully read the AC adapter's instructions before use.
- When using an AC adapter, the AC adapter supplies power to the camera even if batteries are loaded in the camera. The AC adapter does not charge batteries in the camera.

## Inserting a card

"Card" in this manual refers to the xD-Picture Card. The camera uses the card to record pictures.

#### **Card basics**

The card corresponds to normal camera film for recording the pictures you have taken.

Pictures recorded and stored on the card can easily be erased, overwritten, and/or edited on a PC.

- 1 Index area
  - You can write down the card's contents.
- 2 Contact area Comes into contact with the camera's signal read contacts.

#### Compatible cards

xD-Picture Card (16 to 256 MB)



 


 This camera may not recognize a non-Olympus card or a card that was formatted on another device (such as a PC, etc.). Before use, be sure to format the card on this camera. [S] "CARD SETUP - Formatting cards" (P.99)

#### Make sure that:



Open the card cover.



- shown in the illustration. · Insert the card keeping it straight.
  - · The card stops with a click when it is inserted all the way.
  - · Inserting the card the wrong way or at an angle could damage the contact area or cause the card to jam.
  - · If the card is not inserted all the way, data may not be written to the card.



Index area side of the card



Notch




The position of the card inserted correctly

Close the card cover securely.



#### Removing the card
 
#### 1 Make sure that:



- 2 Open the card cover.
- 3 Push the card all the way in to unlock it, and let it return slowly.
  - The card is ejected a short way and then stops.



#### Note:

Releasing your finger quickly after pushing the card all the way in may cause it to eject forcefully out of the slot

4 Hold the card straight and pull it out.





 Do not use a sharp-pointed object such as a pen or any other rigid object when pushing the card.

Note

 Never open the card cover, or remove the card or the batteries while the camera is turned on. Doing so could destroy the data on the card. Once destroyed, data cannot be restored.

## Power on/off

#### When shooting pictures (Shooting mode)

Power on:

Open the lens barrier fully.

The camera turns on in the shooting mode and the lens extends.

If the lens does not extend when the lens barrier is opened, there is a possibility that the barrier is not fully open. Open the lens barrier fully until you feel it clicks.

 


Power off:

Close the lens barrier slightly until it almost touches the lens barrel.

The lens barrier stops just before it touches the lens and the lens retracts. Wait until the lens is fully retracted before closing the lens barrier completely.

The camera turns off.





#### TIPS

 To save battery power, the camera automatically enters the sleep mode and stops operating if not used for 3 minutes. If the monitor is on, it will automatically turn off. The lens retracts automatically 5 minutes after that. The camera activates again as soon as you lightly press the shutter button or zoom lever. Whenever possible, turn the camera off when you do not intend to take any pictures for a while.



 
 Do not push the lens barrier forcefully against the lens as this may damage the lens or cause it to malfunction.

Note

#### When playing back pictures (Playback mode)

Power on:

Press (playback) with the lens barrier closed. The camera turns on in the playback mode. The monitor turns on and the last picture taken is displayed.



Power off:

Press 🕨 .

The monitor and the camera turn off.





#### TIPS

• When the camera turns on, the monitor may light up for an instant and a picture appear after a short time. This is not a malfunction.



Never open the card cover, remove the card or the batteries, or connect
or disconnect the AC adapter while the camera is turned on. Doing so
could destroy all data on the card. Destroyed data cannot be restored.
When changing the card, be sure to turn the camera off before opening
the card cover.

#### The power is on when:



The lens is extended



The monitor is turned on

 Even if the monitor is turned off, the camera still consumes battery power when the lens is extended.

#### The power is off when:



The lens barrier is closed



The monitor is turned off

### If the card is not recognized (card check)

When the power is turned on, the camera checks the card automatically. If there is no card in the camera or a card that is not supported by this camera is inserted, the following screen is displayed.



 
• All data stored on the card is erased when the card is formatted.

Note

 
Monitor indication	Corrective action
NO CARD	There is no card in the camera or the card is not inserted properly.  → Insert a card. If a card is already inserted, remove it and insert it again correctly.
CARD SETUP  (POWER OFF)  (T) FORMAL  SLEST+81 GO+(OK)	The card cannot record, play back or erase pictures. Replace with a new card, or format the card.  → Press ② ⑤ to select POWER OFF, and press ③ . Replace it with a new one.  → Format the card.  Press ② ⑤ to select ① FORMAT, and press ③ to display the confirmation screen. Select YES and press ③ .  Formatting starts. If the card was successfully formatted, the camera is ready to take pictures.

You can select a language for on-screen display. This reference manual shows the English on-screen display in the illustrations and explanations. Available languages vary depending on the area where you purchased this camera.

- Open the lens barrier fully.
- 2 Press (18).
  - · The top menu is displayed.







tab, and press 🔊 .



Press @ Ø to select • and press 🔊 .



- 6 Press (2) to select a language, and press (2).
- 7 Press (2) again to exit the menu.



8 Close the lens barrier to turn the camera off.



#### TIPS

• The language can also be set from the playback mode.

 
1 Open the lens barrier fully.



- 2 Press 🖺.
  - · The top menu is displayed.



3 Press (s) on the arrow pad to select MODE MENU.



4 Press (25) to select the SETUP tab, and press (6).



- **5** Press 5 to select -, and press 6.
  - The green frame moves to the selected item.



- 6 Press ⊗ ⊚ to select one of the following date formats: Y-M-D (Year/Month/Day), M-D-Y (Month/Day/Year), D-M-Y (Day/Month/Year). Then press ⊗ .
  - · Move to the year setting.
  - The following steps show the procedure used when the date and time settings are set to Y-M-D.
- 7 Press to set the year, and press to move to the month setting.
  - To move back to the previous setting, press (a).
  - The first two digits of the year are fixed.





- 8 Repeat this procedure until the date and time are completely set.
  - The camera only displays the time in 24-hour time sysytem ("2.pm" would be "14:00").
- 9 Press 🖺.
  - For a more accurate setting, press (a) when the time signal hits 00 seconds.
     The clock starts when you press the hutton



## 10 Close the lens barrier to turn the camera off.



 The current settings are retained even when the power is turned off, unless they are readjusted.

Note

 The date and time settings will be canceled if the camera is left without batteries for approximately 30 minutes. The settings will be canceled more quickly if the batteries were only loaded in the camera for a short time before being removed. Before taking important pictures, check that the date and time settings are correct.



#### IIFS

· The date and time can also be set from the playback mode.

## Holding the camera

Hold the camera firmly with both hands while keeping your elbows at your sides to prevent the camera from moving.

When taking pictures in the vertical position, hold the camera to position the flash above the lens.

Keep your fingers and the strap away from the lens and flash.

#### Correct grip:


Horizontal grip



#### Vertical grip



#### Incorrect grip:

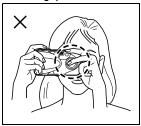




Clear pictures cannot be obtained if the camera moves as the shutter button is pressed. Hold the camera correctly, and press the shutter button gently.


### 2 About the menus

## Types of menus

When you turn on the camera and press (2), the top menu is displayed on the monitor. The functions of this camera are set from the menus. This chapter explains how the menus work, using the shooting mode screens.

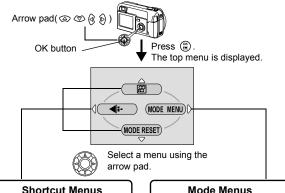

- · Take you directly to the setting
- screens. · Display operational buttons at the bottom of the screen.

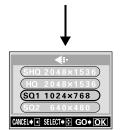


#### Mode Menus


- · Categorizes the settings into tabs · Displays the tabs of each
- menu. Select the desired tab on the left of the screen by pressing



## How to use the menus

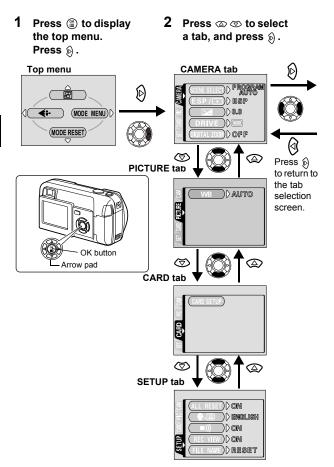


 3 Press ⊚ ♥ to select an item, and press ⋈ .



The green frame moves to the selected item.

4 Press to select a setting.
Press to complete setting.
Press again to exit the menu and return to shooting status.

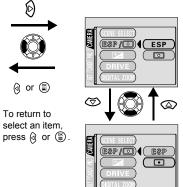




- Not all items can be selected depending on the status of the camera and the settings performed.
- In the shooting mode, you can take pictures by pressing the shutter button even with the menu being displayed.
  - If you want to save the settings after the camera is turned off, set ALL RESET to OFF. "">"ALL RESET - Saving the camera's settings" (P.97)

## **Shortcut menus**

 
#### **Shooting mode**

Shortcut menus are frequently used menus that can be accessed from the top menu.

#### Still picture



#### Movie

 

#### 

Lets you record movies. It is displayed when the camera is in the still picture mode.

P.53

#### PHOTO (Still picture)

Lets you take still pictures. This method is easy as all you have to do is to press the shutter button. It is displayed when the camera is in the movie mode.

P.43



Sets the image quality and resolution.

Still picture : SHQ, HQ, SQ1, SQ2 Movie : HQ, SQ P.70

#### MODE RESET

Resets all settings including the exposure compensation and white balance to the factory default settings. When the shooting mode is set to a this menu resets the mode to PH0T0 (Still picture).

P.96

#### Playback mode

#### Still picture



#### Movie





Runs through all saved pictures one after another. It is displayed when the camera is playing back still pictures.

P.83

#### **MOVIE PLAY**

Plays back movies. It is displayed when a movie is selected. P.86

#### INFO

Displays all the shooting information on the monitor. P.101

 
#### **☆ ERASE**

Erases the selected still picture or movie. P.89

# **Mode Menus**


The MODE MENU has 4 tabs. Press @ ③ to select a tab and display the associated menu items.

# **Shooting mode**



CAMERA tab		
SCENE SELECT	Selects the shooting mode from PROGRAM AUTO, ( (portrait),  (alandscape), (night scene) and (self-portrait).	P.40
ESP/	Selects the metering method from ESP and   .	P.64
Z	Adjusts the brightness of the image (Exposure compensation).	P.74
DRIVE	Selects the shooting mode from (Single-frame shooting) and (sequential shooting).	P.65
DIGITAL ZOOM	Enables the zoom shooting at larger magnification than the maximum optical zoom.	P.56
PANORAMA	Allows panorama pictures to be taken with Olympus CAMEDIA-brand cards.	P.66
2 IN 1	Combines two still pictures taken in succession and stores them as a single picture.	P.68


PICTURE tab		
VVB	Sets the appropriate white balance according to the light source.	P.76

 

CARD tab		
CARD SETUP	Formats a card.	P.99

SETUP tab			
ALL RESET	Selects whether to keep the current camera settings when you turn off the power.		
₽Æ	Selects a language for on-screen display.	P.26	
<b>■</b> 1))	Turns the beep sound (used for warnings, etc.) on and off.	P.104	
REC VIEW	Selects whether to display pictures on the monitor while saving them to a card.		
FILE NAME	Changes how file names are assigned.		
PIXEL MAPPING	Checks the CCD and image processing functions for errors.		
<u>.</u>	Adjusts the brightness of the monitor.	P.102	
0	Sets the date and time.	P.28	
VIDEO OUT	Selects NTSC or PAL according to your TV's video signal type. TV video signal types differ depending on the region.	P.107	


# Playback mode

 

PLAY tab		
Отп	Protects pictures from accidental erasure.	P.88
5	Rotates pictures 90 degrees clockwise or counterclockwise.	P.85
凸	Stores print reservation information on the card.	P.108

EDIT tab		
BLACK&WHITE	Creates a black and white picture and saves it as a new picture.	P.92
SEPIA	Creates a sepia-toned picture and saves it as a new picture.	P.92
<b>N</b>	Makes the file size smaller and saves it as a new file.	P.93
INDEX	Creates an index picture of a movie in 9 frames.	P.94

CARD tab		
CARD SETUP	Erases all image data stored on the card	P.90
CARD SETOF	(ALL ERASE, FORMAT)	P.99

 

SETUP tab		
ALL RESET	Selects whether to keep the current camera settings when you turn off the power.	
<b>₽</b> :	Selects a language for on-screen display.	
<b>■</b> 1))	Turns the beep sound (used for warnings, etc.) on and off.	
	Adjusts the brightness of the monitor.	
0	Sets the date and time.	P.28
VIDEO OUT	Selects NTSC or PAL according to your TV's video signal type. TV video signal types differ depending on the region.	P.107
<b>B</b>	Selects the number of frames in the index display.	P.81

# 3 Shooting basics

# **Shooting mode**

This camera allows you to take still pictures and record movies. You can select the appropriate mode from the SCENE SELECT (PROGRAM AUTO/ ♠ / ♠ / ♦ / ♠) depending on the shooting conditions and the effect you want to achieve when you take still pictures. The factory default setting of the shooting mode is PROGRAM AUTO. For normal shooting which does not require any special setting or effect, you do not need to follow this procedure.

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode.

 




The top menu is displayed.



- 3 Press (a) on the arrow pad to select MODE MENU.
  - Press ♠, and select ➡ to record a movie.
     ➡ "Recording movies" (P.53)
- 4 Press 🌣 🀨 to select the CAMERA tab, and press 🔊 .





**CAMERA Tab** 

# 5 Press ⊚ ☺ to select SCENE SELECT, and press ℘.

- The green frame moves to the selected item.
- 6 Press ⊗ ⊗ to select PROGRAM AUTO, ♠, ♠, 戶 or ♠ depending on the shooting conditions and the effect you want to achieve.





- 7 Press 🖺.
  - Press ( again to exit the menu.

## ● PHOTO (Still picture)

Lets you take a still picture. You can select one of the five shooting modes depending on the situation.

## ● 🖾 (Movie)

Selected from the shooting mode top menu. [3] "Types of menus" (P.31) Lets you record movies. The camera maintains the correct focus and exposure even if your subject moves. You cannot record movies with sound. [3] "Recording movies" (P.53)

### Shooting mode for still pictures

### P PROGRAM AUTO (Factory default setting)

Used for regular photography. The camera automatically makes the settings for natural color balance. Other functions, such as the flash mode and metering, can be adjusted manually.

# ● (Portrait)

Suitable for taking a portrait-style shot of a person. The camera automatically sets the optimal shooting conditions.

### ● ▲ (Landscape)

Suitable for taking pictures of landscapes and other outdoor scenes. The camera automatically sets the optimal shooting conditions.

### ● **炒** (Night scene)

Suitable for shooting pictures in the evening or at night. The camera sets a slower shutter speed than is used in normal shooting. If you take a picture of a street at night in any other mode, the lack of brightness will result in a dark picture with only dots of light showing. In this mode, the true appearance of the street is captured. The camera automatically sets the optimal shooting conditions. If you use the flash, you can take pictures of both your subject and the night background. [3] "Night scene mode" (P.51)







Night scene mode (Flash fires.)

### ● 👪 (Self portrait)

Enables you to take a picture of yourself while holding the camera. Point the lens towards yourself and the focus will be locked on you.

The camera automatically sets the optimal shooting conditions. The zoom is fixed in the wide position and cannot be changed.





#### TIPS

For details of the functions for each mode "List of items by shooting mode" (P.129)



- · Sequential shooting is not available in the night scene mode.
- The digital zoom and panorama shooting are not available in the self portrait mode.

# **Taking still pictures**



 
You can take still pictures using either the viewfinder or the monitor. Both methods are easy as all you have to do is to press the shutter button. When the camera is in the movie record mode, press (a) and, from the top menu, select PHOTO (Still picture).

# Taking still pictures using the viewfinder

The camera actually records a wider area than the picture you compose while looking through the viewfinder.

# 1 Open the lens barrier fully.

 Slide the lens barrier fully open until it clicks




 When the distance from the camera to the subject is less than 50 cm/1.6 ft., select the macro mode.
 "Macro mode shooting" (P.61)





# 3 Press the shutter button gently (halfway) to adjust the focus.

 - Focus and exposure are locked, when the green lamp lights steadily. (Focus Lock)
- When the flash is ready to fire, the orange lamp lights.



- The camera takes the picture, and a beep sounds.
- When the green lamp stops blinking, you can take the next picture.





The orange lamp blinks while the picture is stored on the card.



#### TIPS

Correct focus cannot be obtained on the subject you want to shoot.

→ IST "If correct focus cannot be obtained" (P.48)

#### The green lamp blinks.

- →You are too close to the subject. Take the picture at least 50 cm/1.6 ft. away from the subject. When the distance from the camera to the subject is less than 50 cm/1.6 ft., select the macro mode. "Macro mode shooting" (P.61)
- →Depending on the subject, the focus may not be locked. If correct focus cannot be obtained (P.48)

#### The orange lamp blinks when the shutter button is pressed halfway.

→The flash is charging. While the orange lamp is blinking guickly after shooting, the picture you just took is being stored. Wait until the lamp goes off.

#### To check the picture you have just taken immediately.

→Set REC VIEW to ON. REC VIEW" (P.103)

## Taking still pictures using the monitor

With the monitor, you can shoot while checking the picture area that the camera actually records.

- 1 Open the lens barrier fully.
  - Slide the lens barrier fully open until it clicks.


- 2 Press .
  - The monitor turns on.
     "Monitor indications" (P.10)



- 3 Decide the composition while looking at the image on the monitor.
- 4 Take the picture by following the same procedure as for shooting using the viewfinder.

∎ "Taking still pictures using the viewfinder" (P.43)

 When you want to take pictures with the monitor off, press again.

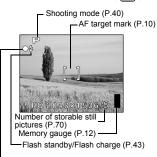

Green lamp

This indicates the same status as the green lamp on the right of the viewfinder. (P.43)



#### TIPS

The monitor turns off automatically.

→If the camera is not used for over 3 minutes, the monitor turns off automatically. The lens retracts automatically 5 minutes after that. Touch the shutter button or zoom lever to turn the monitor on.

#### The monitor is hard to see.

→Bright light, such as direct sunlight, may cause vertical lines to appear on the monitor screen. In this case, use the viewfinder. This does not affect recorded pictures.



- Press the shutter button gently using the ball of your finger. If it is pressed hard, the camera may move, resulting in a blur.
- Never open the card cover, remove the batteries or disconnect the AC adapter while the orange lamp is blinking. Doing so could destroy stored pictures and prevent storage of pictures you have just taken.
  - When taking pictures against strong backlight, the area of the picture in shadow may appear colored.

# Comparison of the viewfinder & monitor

	Viewfinder	Monitor
Advantages	Camera movement does not occur easily and subjects can be seen clearly even in bright places. Little battery power is used.	You can check the picture area that the camera actually records more accurately.
Disadvantages	When close to a subject, the image in the viewfinder is a little different from the picture that the camera actually records.	Camera movement can occur easily and subjects may be difficult to see in bright/dark places. The monitor uses more battery power than the viewfinder.
Tips	Use the viewfinder for general snapshots (landscape pictures, casual shots, etc.).	Use the monitor when you want to shoot while checking the picture area that the camera actually records, or when you take close-up shots of people or flowers (macro shooting).



- The camera records a wider area than the image in the viewfinder.
- As you get closer to the subject, the actual image recorded becomes lower than the one in the viewfinder (see left).

# If correct focus cannot be obtained

When correct focus cannot be obtained on the subject you want to shoot, you can focus the camera on another point at roughly the same distance (focus lock) and take the picture as explained below.

### Determine the position of the subject after focusing (Focus Lock)

 
### Open the lens barrier fully.

 The camera turns on in the shooting mode.



# Position the AF target mark on the subject you want to focus on.

 When shooting a hard-to-focus subject, point the camera at an object about the same distance away as the subject.



#### 3 Press the shutter button halfway until the green lamp lights.

- The focus and exposure are locked, the green lamp lights steadily.
- When the green lamp blinks, the focus and exposure are not locked. Release your finger from the shutter button, re-position your subject and press the shutter button halfway again.



Keeping the shutter button pressed halfway, recompose your shot.



5 Press the shutter button fully.





The green lamp blinks.

- →You are too close to the subject. Take the picture at least 50 cm/1.6 ft. away from the subject. When the distance from the camera to the subject is less than 50 cm/1.6 ft., select the macro mode. "Macro mode shooting" (P.61)
- →Depending on the subject, the focus may not be locked. "Subjects that are difficult to focus on" (P.50)

# Subjects that are difficult to focus on

Under certain types of conditions, the auto focus may not work properly. If this happens, focus on an object with high contrast at the same distance as the intended subject (focus lock), recompose your shot and then take the picture. If the subject has no vertical lines, hold the camera vertically and focus the camera using the focus lock function by pressing the shutter button halfway, and return the camera to the horizontal position while keeping the button pressed halfway and take the picture.

The green lamp blinks. The subject cannot be brought into focus.



Subject with low contrast



Subject with an extremely bright area in the center of the frame



Subject without vertical lines





Subjects at different distances



Fast-moving subject



The subject to be focused on is not in the center of the frame.

# Night scene mode



Setting the mode to Night scene allows you to take landscape shots at night under optimum conditions. In this mode, the shutter speed is not fixed to 1/30 second maximum when the flash is activated. Depending upon the subject or shooting conditions, shutter speed may extend up to 2 seconds. The noise reduction function activates automatically reducing 'noise' when the shutter speed is over 1 second. This function reduces electrostatic 'noise' that occurs with long exposure shots.



Noise Reduction: OFF



Noise Reduction: ON

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode.



- 2 Press 🖺 .
  - · The top menu is displayed.



3 Press on the arrow pad to select MODE MENU.

# 4 Press ⊚ ⊚ to select the CAMERA tab, and press ℘.



# 5 Press ⊚ ☺ to select SCENE SELECT, and press ⋒.

The green frame moves to the selected item



# 6 Press ⊚ ⊚ to select ⋑, and press ⊜.

- The setting is set to the night scene mode and the camera returns to the shooting mode.
- The night scene mark 🕏 appears on the monitor



### 7 Take the picture.

 If the shutter speed is more than 1 second, the noise reduction function will automatically be activated. The green and orange lamps will blink during processing.



 This function may not work effectively with some shooting conditions or subjects.

Note

- The prior flash setting is maintained in the night scene mode.

  The flosh mode is not independently from the prints access mode.

  The flosh mode is not independently from the prints access mode.
- The flash mode is set independently from the night scene mode.
   "Using the flash" (P.58)
- Since the shutter speed is slow, make sure you stabilize the camera by using a tripod or set it on a level surface.

# **Recording movies**



You can record movies with this camera. Recorded movies can be played back or stored separately as still pictures using the index function.

 
[ST "INDEX - Creating an index" (P.94)

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode.



2 Press (a).The top menu is displayed.





- Movie recording is set and the menu is closed.
- The mark and the total recordable time depending on the card memory capacity are displayed on the monitor.



4 Decide the composition while looking at the image on the monitor.



5 Press the shutter button halfway.

Seconds remaining

# 6 Press the shutter button fully to start recording.

- The orange lamp on the right of the viewfinder lights.
- When recording a movie, the camera automatically adjusts the focus and exposure according to the moving subject.
- During movie recording, lights red and the time you can shoot is displayed.

### 7 Press the shutter button again to stop recording.

- · The orange lamp blinks while the movie is stored on the card.
- When the remaining recording time has been used up, recording stops automatically.
- To return to the still picture shooting mode, press 
   in the top menu, and select PH0T0 (Still picture).



- The movie mode is canceled when the lens barrier is closed.
   "ALL RESET Saving the camera's settings" (P.97)
- · During movie recording, the flash is disabled.
- It takes longer to store movies than still pictures.
- The seconds remaining varies depending on the record mode.
- · You cannot record movies with sound.

# Zoom

 
Telephoto and wide-angle shooting are possible at 3x magnification (the optical zoom limit, equivalent to 35 mm - 105 mm on a 35 mm camera). By combining the optical zoom with the digital zoom, zoom magnification can be increased to a maximum of approximately 10x.

# Using the optical zoom

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode



Push/pull the zoom lever while observing the subject on the monitor or viewfinder.



Wide-angle: Push the zoom lever toward W to zoom out.

Telephoto: Pull the zoom lever toward T to zoom in.



3 Take the picture.

# Using the digital zoom

- 1 Open the lens barrier fully.
- 2 Press (\*).
  - The top menu is displayed.
- Press () to select MODE MENU.











tab, and press 🔊 .

5 Press to select DIGITAL ZOOM, and press (6).

## 

 Press (a) again to exit the menu and return to the shooting status.

## 7 Pull the zoom lever toward $T^{Q}$ .

 The white area of the zoom indicator indicates the optical zoom. If the digital zoom is set to ON, a red area appears on the zoom indicator. The digital zoom is enabled when you reach the limit of the optical zoom and then pull the zoom lever toward T.





The cursor moves up and down on the zoom indicator according to the zoom magnification.

# 8 Take the picture.



- · Pictures taken with the digital zoom may appear grainy.
- Camera movement is likely to occur at higher magnifications. Stabilize the camera with a tripod, etc. to avoid camera movement.
- Turning the monitor off cancels the digital zoom, and the camera takes a picture at the specified optical zoom magnification. It will be automatically enabled the next time you turn the monitor on.
- · You cannot use the digital zoom in Self-Portrait mode.

Select the flash mode best suited to the light conditions and the effect you want to achieve.

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode.



- 2 Press () ( ≰ ).
  - · The current flash setting is displayed.
- 3 Press b to change the flash mode to your desired setting.
  - Each time you press (a), the flash mode changes in the following sequence:
     "Auto-flash" " (a) Red-eye reduction flash" " (b) Flash off".





- 4 Press the shutter button halfway.
  - · When the flash is set to fire, the orange lamp remains lit.
- 5 Press the shutter button fully to take the picture.

Flash working range

W (max.): Approx. 20 cm to 3.4 m (0.7 ft. to 11 ft.)

T (max.): Approx. 20 cm to 2.0 m (0.7 ft. to 7 ft.)



TIPS

The orange lamp or 🕻 (flash standby) indication blinks.

ightarrowThe flash is charging. Wait until the orange lamp goes off.



- The flash does not fire in the following situations:
   When shooting in the movie record more, during sequential shooting ( □ II ) or panorama shooting.
  - The flash may not give you the optimum result in the macro mode, especially with wide-angle shooting. Check the resulting picture on the monitor.

### Auto-flash (No indication)

The flash fires automatically in low light or backlight conditions. To shoot a subject with backlight, position the AF target mark over the subject.

### Red-eye reduction flash (◎)

The light from the flash may make the subject's eyes appear red in the picture. The red-eye reduction flash mode significantly reduces this phenomenon by emitting pre-flashes before firing the regular flash. This helps accustom the subject's eyes to the bright light and minimizes the red-eye phenomenon.



The subject's eyes appear red.



- After the pre-flashes, it takes about 1 second before the shutter is released. Hold the camera firmly to avoid camera movement.
- Effectiveness may be limited if the subject is not looking directly at the pre-flashes, or if the shooting range is too far. Individual physical characteristics may also limit effectiveness.

# ● Fill-in flash ( 🕏 )

The flash fires regardless of the available light. This mode is useful for eliminating shadows on the subject's face (such as shadows from tree leaves), in a backlight situation, or for correcting the color shift produced by artificial lighting (especially fluorescent light).



Note

 The fill-in flash may not have the desired effect under excessively bright light.

# ●Flash off (③)

The flash does not fire even in low light conditions. Use this mode in situations where flash photography is not desired or is prohibited, such as in an art museum. You can also use this mode when you want to shoot a natural-looking twilight or night scene.



 Since a slow shutter speed is automatically selected in low light situations when in the flash off mode, the use of a tripod is recommended to prevent your pictures from being blurred by camera movement.

# 4 Advanced shooting

# Macro mode shooting



The macro mode allows you to shoot at a distance of 20 cm to 50 cm (0.7 ft. to 1.6 ft.) from your subject.

Regular photographs can be taken, but the camera may take time to focus on distant subjects.



Normal shooting



With macro mode

- 1 Open the lens barrier fully.
  - The camera turns on in the shooting mode.



 The monitor turns on and the current setting is displayed.





# 3 Press ⊚ (♥) to switch the macro mode on or off.

- The setting changes between and OFF each time is pressed.
   When the macro mode is selected, is displayed on the monitor.
- HQ 204881536-5

# 4 Take the picture.



- If you are close to a subject, the picture in the viewfinder is different from the area that the camera actually records. For macro mode shooting, we recommend using the monitor.
- If you use the flash in macro shooting, shadows may be conspicuous and the correct exposure may not be achieved.

# **Self-timer shooting**



This function lets you take pictures using the self-timer. Fix the camera securely on a tripod or set it on a level surface for self-timer shooting. This function is useful for taking pictures where you want to be included in the photograph.

### Open the lens barrier fully.

 The camera turns on in the shooting mode.



# 2 Press ∅ (♂).

 The monitor turns on and the current selftimer setting is displayed.



# 3 Press ⊚ ( ઙ) ) to switch the self-timer mode on or off.

The setting changes between SON and OFF each time as is pressed.
 When the self-timer mode is selected,
 is displayed on the monitor.



### 4 Take the picture.

- The self-timer lamp lights up for approximately 10 seconds, and starts blinking. After blinking for 2 seconds with a beep sound, the picture is taken.
- The self-timer mode is automatically canceled after one shot



# Selecting the metering area



In a backlight situation, your subject may appear dark if the picture is taken with the normal metering value (Digital ESP metering). In this case, by changing the metering area to the center of the viewfinder screen (Spot metering), a subject can be shot with optimal exposure regardless of the background light.

ESP (Digital ESP) : Meters the center of the viewfinder and the area around it

separately to obtain the optimum exposure.

(Spot metering) : Meters only the center of the viewfinder to obtain the

appropriate exposure for the subject.

1 In the shooting mode top menu, select MODE MENU → CAMERA → ESP/ , and press

"How to use the menus" (P.32)



2 Press ⊚ ☺ to select •, and press ⑤.

• Press (

) again to exit the menu.



3 Take the picture.



TIPS

 The camera returns to ESP (factory default setting) when the lens barrier is closed.

"ALL RESET - Saving the camera's settings" (P.97)

# Sequential shooting



This function allows you to take a rapid succession of still pictures by pressing and holding the shutter button (up to 11 pictures at 1.5 frames per second by Sequential shooting in HQ mode). As you can choose the best picture from a series of sequential shots, you are recommended to use this mode when taking pictures of a moving subject. Focus, exposure and white balance are locked at the first frame. You can also erase the unwanted shots afterwards.

[32] "Single-frame erase" (P.89)

1 In the shooting mode top menu, select MODE MENU → CAMERA → DRIVE, and press ②.

13 "How to use the menus" (P.32)



- 2 Press ⊚ ⋄ to select 및, and press ⑤.
  - Press ( again to exit the menu.



### 3 Take the picture.

- Press the shutter button fully and keep it pressed. The camera will take
  pictures in sequence until you release the button.
- You are recommended to use the viewfinder for sequential shooting.
   During sequential shooting, the subject does not appear on the monitor.



 
- The sequential shooting mode is canceled when the lens barrier is closed. ALL RESET - Saving the camera's settings" (P.97)
- During sequential shooting, the flash is disabled.
  - If the battery power is low and the battery check blinks during sequential shooting, shooting stops and the camera starts saving the pictures you have taken. Whether or not all of the shots are saved depends on how much battery power remains.

# **PANORAMA**


You can take advantage of panorama shooting with the Olympus xD-Picture Card. Panorama shooting lets you connect pictures with overlapping edges into a single panoramic picture, using the CAMEDIA Master software.

- $\begin{tabular}{ll} 1 & \mbox{In the shooting mode top menu,} \\ & \mbox{select MODE MENU} \end{tabular} \rightarrow \mbox{CAMERA}$ 
  - $\rightarrow$  PANORAMA, and press  $\ensuremath{\mathfrak{D}}$  .
  - "How to use the menus" (P.32)
  - The PANORAMA mode is set. The subject is displayed on the monitor.
- 2 On the monitor, use the arrow pad to choose the direction you want the pictures connected.
  - © : Connects the pictures from left to right.
  - Connects the pictures from right to left.
  - Connects the pictures from bottom to top.
  - Connects the pictures from top to bottom.





 Connects the pictures from left to right.



Connects pictures from bottom to top.

# 3 Make sure that the edges of the pictures overlap, and take pictures.

- Focus, exposure and white balance are set by the first picture. Do not select an extremely bright subject (such as the sun) for the first picture.
- · You cannot adjust the zoom after the first picture.
- · Panorama shooting is possible for up to 10 pictures.



When shooting, make sure that the edges (right/left/top/bottom) of the images overlap, so that the CAMEDIA Master software can correctly connect the pictures.

 When you have taken 10 pictures, a warning mark appears.



### 4 Press (2) to finish panorama shooting.

 The frame on the screen disappears and the camera returns to the normal shooting mode.



- The panorama mode is only available with Olympus CAMEDIA-brand cards.
- e
- Your computer's memory may be insufficient if you take too many panorama pictures in HQ or SHQ mode. You are recommended to use SQ mode for panorama shooting.
- During panorama shooting, sequential shooting is not available.
- The camera itself cannot connect panorama pictures. The CAMEDIA Master software is necessary to connect the pictures.

This function allows you to combine two pictures taken in succession and store them as a single picture. You can combine two different subjects in one picture.

 


Picture when played back

 In the shooting mode top menu, select MODE MENU → CAMERA → 2 IN 1, and press

"How to use the menus" (P.32)

- The two-in-one picture mode is set. The subject is displayed on the monitor.
- 2 Take the first shot while observing your subject on the monitor.
  - The subject will be positioned on the left in the combined picture.



 The subject will be positioned on the right in the combined picture.







Picture when shooting



- During 2 IN 1 mode shooting, the panorama and sequential shooting are not available.
- When the batteries are exhausted ( is displayed), the flash automatically turns off.
- The 2 IN 1 mode is canceled when (a) is pressed or the lens barrier is closed. Press (a) to cancel the 2 IN 1 picture mode after the first shot has been taken. The first picture will not be stored.
- The 2 IN 1 mode is canceled when the camera enters the sleep mode after shooting the first picture.

# Selecting a record mode



You can select a record mode in which to take pictures or shoot movies. Choose the best record mode for your purpose (printing, editing on a PC, website editing, etc.). For details of the different record modes, resolutions and number of storable still pictures on the card, refer to the table on the next page. The numbers in the table are approximate.

Record mode	Description	Quality	File size
	A high quality mode.     Fewer images can be saved to a card.     Takes longer to store the images.	Clearer	Larger
SHQ	Uses    Good for printing.    Can be enlarged to A4 (210 mm x 297 mm / 8.3" x 11.7") size.    Good for processing on a PC.		
HQ	Factory default setting.  Uses     Good for editing on a PC or printing in postcard size.		
SQ1/SQ2	The resolutions are smaller than in SHQ or HQ. A standard quality mode. More images can be saved to a card. Uses Attaching images to e-mail or simply viewing them on a PC.	<b>▼</b> Normal	<b>▼</b> Smaller

#### Still Picture Record Modes

Record mode	Resolution (No. of pixels)	Memory capacity in number of shots (using a 16 MB card)
SHQ	2048 x 1536	6
HQ	2040 X 1000	20
SQ1	1024 x 768	76
SQ2	640 x 480	165

### Movie Record Modes Maximum time for one recording (sec)

Record mode	Resolution	Movie recording time
HQ	320 x 240	15
SQ	160 x 120	60



- The card memory capacity listed in the table is approximate.
- The number of remaining pictures may change according to the subject or factors like whether print reservations have been made or not. In certain instances, the number of remaining pictures displayed on the monitor does not change even when you take pictures or stored images are erased.
  - If movies are shot with VIDEO OUT set to PAL and the VIDEO cable connected, the movie recording time will differ from the time listed in the Movie Record Modes table.



#### TIPS

#### Resolution

The number of pixels (horizontal x vertical) used when saving an image. If the image will be printed, higher resolutions (larger numbers) are recommended so that the image will be clearer. However, higher resolutions make the file size (amount of data) larger, so the number of pictures that can be saved will be fewer.

#### · Resolution and picture size on a computer screen

When a picture is transferred to a computer, the size of the picture on the computer screen varies depending on the computer's monitor setting. For instance, a picture taken in  $1024 \times 768$  resolution is the same size as the screen if you set the picture to 1x when the monitor setting is  $1024 \times 768$ . However, if the monitor setting is over  $1024 \times 768$  (such as  $1280 \times 1024$ ), the picture only takes up part of the screen.

# 1 In the shooting mode top menu, press ℘ to select **€**.

"How to use the menus" (P.32)



- 2 Press to select the desired record mode.
  - For still pictures, you can choose from SHQ, HQ, SQ1 and SQ2.



· For movies, you can choose HQ or SQ.



- 3 Press 🖺.
  - Press ( again to exit the menu.



 The record mode setting returns to HQ (factory default setting) when the lens barrier is closed. "S" "ALL RESET - Saving the camera's settings" (P.97)



This function allows you to make fine changes to the automatic exposure setting. In some situations, you may get better results when the exposure that the camera sets is compensated (adjusted) manually. You can adjust the brightness in the range of ±2.0 in 0.5 steps.

 
When the setting is changed, you can check the result on the monitor.

 
In the shooting mode top menu, select MODE MENU → CAMERA → 

"How to use the menus" (P.32)



- Press 
  to select the exposure compensation value.
  - Select a [+] value to brighten the image or a [ - ] value to darken the image.





Take the picture.



Advanced shooting

 Often bright subjects (such as snow) will turn out darker than their natural colors. Adjusting toward + makes these subjects closer to their real shades. For the same reason, adjust toward - when shooting dark subjects.



- The exposure compensation value returns to 0.0 (factory default setting) when the lens barrier is closed. 
   (See "ALL RESET - Saving the camera's settings" (P.97)
- If the flash is used, the image brightness (exposure) may differ from the intended brightness.
- Exposure compensation cannot correct the image if the surroundings of the subject are extremely bright or dark.

Color reproduction differs depending on the light conditions. For instance, when daylight, the setting sun or tungsten lighting are reflected on white paper, the shade of white produced will be slightly different for each. By setting the WB (white balance), you can achieve more natural-looking colors.

1 In the shooting mode top menu, select MODE MENU  $\rightarrow$  PICTURE  $\rightarrow$  WB, and press  $\otimes$  .

"How to use the menus" (P.32)



Press to select the white balance best suited to the shooting conditions. Choose from AUTO,





AUTO (No indication): The white balance is

adjusted automatically so that colors look natural

irrespective of the light source.

☆ (Sunlight)
 ∴ For natural colors under a clear sky.
 ∴ (Overcast)
 ∴ For natural colors under a cloudy sky.
 ∴ (Tungsten)
 ∴ For natural colors under tungsten lighting.
 ∴ (Fluorescent)
 ∴ For natural colors under fluorescent lighting.

- 3 Press 🖺.
  - Press (

    ) again to exit the menu.
- 4 Take the picture.




- The white balance setting returns to AUTO (factory default setting) when the lens barrier is closed. "ALL RESET - Saving the camera's settings" (P.97)
- White balance may not be effective under some special light sources.
- After setting a white balance other than AUTO, play back the picture and check the colors on the monitor.
- When the flash is fired with a white balance setting other than AUTO, colors may appear different in the resulting picture from the colors you see on the monitor.

# 5 Playback
 
# Viewing still pictures




1 Press • with the lens barrier closed.



 The monitor turns on and displays the last picture taken. (Single-frame playback)



2 Use the arrow pad to play back other pictures.

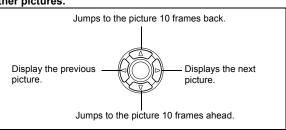

- 3 Press **►** to cancel playback.
  - · The monitor and camera turn off.



 If the camera is not used for over 3 minutes, the monitor and camera turn off automatically.

#### **QUICK VIEW**

This function lets you play back pictures while the camera is in the shooting mode. This is useful when you want to check shooting results and resume shooting quickly.

Functions available in normal playback mode are also available in Quick View

- 1 Press (QUICK VIEW) twice quickly (doubleclick) while in the shooting mode.
  - The camera immediately enters the playback mode and displays the last picture taken. (Single-frame playback)



- 2 Press the shutter button halfway to return to the shooting mode.
  - The camera returns to shooting mode, and is ready to take pictures.
  - · Press the shutter button all the way (fully) to return to the shooting mode and take a picture immediattely.

#### Close-up playback Q


Pictures displayed on the monitor can be enlarged in steps up to 4 times the original size.

- 1 Press 
  with the lens barrier closed.
  - The monitor turns on and displays the last picture taken.
- 2 Use the arrow pad to display the still picture you want to enlarge.



3 Pull the zoom lever toward  $\tau^{Q}$ .

- The magnification increases each time the zoom lever is pulled. To return the picture to the original size (1x), push the zoom lever toward
- By using the arrow pad while the enlarged picture is displayed, you can shift the picture in the desired direction, enabling you to view a different portion.

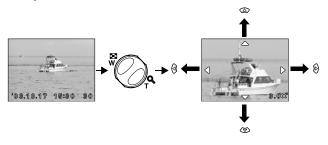



• Pictures cannot be stored in an enlarged state.

### Index display



This function lets you show several pictures at the same time on the monitor. The number of pictures shown can be 4, 9 or 16. Reg "Selecting the number of pictures" (P.82)

- Press with the lens barrier closed.
  - · The monitor turns on and displays the last picture taken. (Single-frame playback)



2 Push the zoom lever toward we to enter the index display mode.







 
- · Use the arrow pad to select the picture.
  - (b) : Moves to the next frame.
  - Moves to the previous frame.
  - Jumps to the previous index display (the frames before the top left frame).
  - (the state of the sext index display) frames following the bottom right frame).
- To return to the single-frame playback, pull the zoom lever toward  $\mathcal{L}^{Q}$ .



### Selecting the number of pictures

This function lets you select the number of pictures in an index display from 4, 9 and 16.

- 1 In the playback mode top menu, select MODE MENU  $\rightarrow$  SETUP  $\rightarrow$ 🔛 , and press 🔊 . "How to use the menus" (P.32)



- 2 Press 👁 🐨 to select 4, 9 or 16, and press (2).
  - Press ( again to exit the menu.



# **Slideshow**



This function displays still pictures stored in the card one after another. Only the first frame of movies is played back.

- Press with the lens barrier closed.
- Display a still picture, and press (2) to display the top menu.
- 3 Press 🖾 (🕒 ) to start the slideshow.
- 4 Press (2) to stop the slideshow.
  - · The slideshow will not stop until you cancel it by pressing ().







 
· You are recommended to use the optional AC adapter when running a slideshow for a long period of time. If batteries are used, the camera will stop the slideshow after about 30 minutes and turn off.

# Playback on a TV

Use the video cable provided with the camera to play back recorded images on your TV.

Both a still picture and a movie can be played back.

Make sure that the camera and the TV are turned off. Connect the Video cable to the VIDEO OUT jack on the camera and the video input terminal on the TV.



- 2 Turn the TV on and set it to the video input mode.
  - For details of switching to video input, refer to your TV's instruction manual.
- 3 Press ▶.
  - The last picture taken is displayed on the TV. Use the arrow pad to select the picture you want to display.
  - The close-up playback, index display and slideshow functions can also be used on a TV screen.



#### TIPS

 You are recommended to use the optional AC adapter when using the camera with a TV.



- Make sure that the camera's video output signal type is the same as the TV's video signal type. ""VIDEO OUT - Video output selection" (P.107)
- The camera's monitor turns off automatically when the video cable is connected to the camera.
- Be sure to use the video cable provided to connect the camera to the TV.
- The picture may appear off-center on the TV screen.
- When pictures are compressed in order to fit the entire picture on the TV screen, a black frame appears around the picture. If the picture is output to a video printer via the TV, the black frame may be printed.

### Picture rotation


Pictures taken with the camera held vertically are displayed horizontally. This function lets you turn such pictures 90 degrees clockwise or counterclockwise so that they are displayed vertically.

 - 1 In the playback mode top menu, select MODE MENU  $\rightarrow$  PLAY  $\rightarrow$   $\stackrel{\leftarrow}{\Box}$ , and press  $\stackrel{\circ}{\otimes}$ .
- 2 Press 🖾 🗇 to select +90° or -90°.
  - The picture is rotated, and displayed vertically.
  - Press ( again exit the menu.









Note

- The following pictures cannot be rotated.
   Movies, protected pictures, pictures that have been edited on a PC and pictures taken with another camera.
- New picture orientations are saved even when the power is turned off.



- Press 

   with the lens barrier closed.
  - · The monitor turns on.
- 2 Use the arrow pad to display the picture with  $\wp$ .

"Viewing still pictures" (P.78)

- 3 Press 🖺.
  - · The top menu is displayed.

4 Press 🗇 to select MOVIE PLAY.







#### 5 Press @ 🕏 to select PLAYBACK, and press (2).

- · The movie is played back. When playback ends, the display automatically returns to the beginning of the movie.
- The MOVIE PLAYBACK menu is displayed again after playback ends. PLAYBACK: Plays back the entire movie again.



#### FRAME BY FRAME:

Plays back the movie manually one frame at a time.

FXIT. Leaves the movie playback mode.

Press to select from PLAYBACK, FRAME BY FRAME or EXIT, and press (\*).

#### When FRAME BY FRAME is selected

- : Displays the first frame of the movie. ຝ
- $\otimes$ : Displays the last frame of the movie.
- (a) : Displays the next frame. The movie can be played continuously by holding the button down.
- : Displays the previous frame. The movie can be played (a) continuously in reverse by holding the button down.
- : Displays the MOVIE PLAYBACK menu.



 Movies can also be played back in the shooting mode using QUICK VIEW. P "QUICK VIEW" (P.79)



• The access time to play a movie varies depending on the total recorded time and the record mode of the movie.

Playback button ( )

OK button
Arrow pad

You are recommended to protect important pictures to avoid accidentally erasing them. Protected pictures cannot be erased by the single-frame/all-frame erase function.

- 1 Press with the lens barrier closed.
  - · The monitor turns on.
- 2 Use the arrow pad to display the picture you want to protect.
- 3 Press ♠.
- The top menu is displayed.
- 4 In the top menu, select MODE MENU  $\to$  PLAY  $\to$   $_{O_{71}}$  , and press  $\mbox{\Large 0}$  .

■ "How to use the menus" (P.32)

- 5 Press to select ON, and press .
  - · To cancel protection, select OFF.
  - Press ( again to exit the menu.



Displayed when a picture is protected.



 Protected pictures cannot be erased by the single-frame/all-frame erase function, but they are all erased by formatting.

5

### **Erasing pictures**



This function enables you to erase recorded pictures. You can choose the single-frame erase or the all-frame erase.



- You cannot erase pictures that are protected. Cancel the protection before erasing such pictures.
  - Once erased, pictures cannot be restored. Be careful not to accidentally erase pictures you want to keep. "Protecting pictures" (P.88)

#### Single-frame erase

This function erases only the picture displayed on the monitor. The all-frame erase function can be used to erase all the pictures on the card at once.

[37] "All-frame erase" (P.90)

- 1 Press 
  with the lens barrier closed.
  - · The monitor turns on.
- 2 Use the arrow pad to display the picture you want to erase.

  See "Viewing still pictures" (P.78)
- 3 Press .
  - · The top menu is displayed.
- 4 Press ☞ to select 😭 ERASE.
- 5 Press to select YES, and press <.</p>
  - The picture is erased and the menu is closed

 




This function erases all the pictures on the card.

- 1 In the playback mode top menu, select MODE MENU → CARD → CARD SETUP, and press ② .

  □ "How to use the menus" (P.32)
- 2 Press to select ALL ERASE, and press .



· All the pictures are erased.







5

Playback

## **Editing still pictures**

This function lets you edit still pictures and store them as new pictures. The following editing operations are possible.

**BLACK&WHITE**: Converts pictures into black and white pictures and stores

them as new pictures.

: Converts pictures into sepia-toned pictures and stores SEPIA them as new pictures.

**Y** : Changes the picture size to 640 x 480 or 320 x 240 and

stores the picture as a new picture.

- 1 Press **•** with the lens barrier closed.
  - The monitor turns on
- 2 Use the arrow pad to display the still picture you want to edit.

"Viewing still pictures" (P.78)



- 3 Press (\*).
  - · The top menu is displayed.
- 4 In the top menu, select MODE MENU  $\rightarrow$  EDIT, and choose each item.

"How to use the menus" (P.32)

- Select BLACK & WHITE (P.92)
- Select SEPIA (P.92)
- **I**□ (P.93) Select

Creating black and white pictures

Select BLACK&WHITE, and press .

- The BUSY bar is displayed, and the camera returns to the playback mode.
   The black and white picture is stored as a separate picture from the original.
- To cancel the editing, select CANCEL and press (\*).





· You cannot create black and white movies.

 You cannot create a black and white picture if there is insufficient memory space on the card.

### Creating sepia-toned pictures

5 Select SEPIA, and press 6.

6 Press 
 to select SEPIA, and press 
.

- The BUSY bar is displayed, and the camera returns to the playback mode.
   The sepia-toned picture is stored as a separate picture from the original.
- To cancel the editing, select CANCEL and press (\*).





· You cannot create sepia-toned movies.

 You cannot create a sepia-toned picture if there is insufficient memory space on the card.

### Resizing -

- 5 Select , and press .
- 6 Press to select the new picture size, and press .
  - The BUSY bar is displayed, and the camera returns to the playback mode.
     The newly created picture is stored as a separate picture from the original.
  - To quit the resizing function, select CANCEL, and press (4).



 


- Resizing is not possible in the following cases.
   Movies, pictures that have been edited on a PC, or when there is insufficient memory space on the card.
- If the size of the selected picture is 640 x 480, you cannot select 640 x 480.

# **INDEX - Creating an index**

9 frames extracted from a movie are displayed as an index to show the movie at a glance. Indexes can be stored on the card as a still picture.

- Press P with the lens barrier closed.
  - The monitor turns on.
- 2 Use the arrow pad to select a picture with  $\mathfrak{P}$ .
- 3 Press 🖺.
  - · The top menu is displayed.












In the top menu, select MODE MENU  $\rightarrow$  EDIT  $\rightarrow$  INDEX, and press

"How to use the menus" (P.32)

5 Select the first frame of the index. Press the arrow pad to play back the movie until the picture that you want as the first frame is displayed in the green frame, and press (2).

#### 6 Select the last frame of the index.

 As in Step 5, press the arrow pad to play back the movie until the picture that you want as the last frame is displayed in the green frame, and press (2).



- · The 9 frames extracted from the movie appear as an index display, and the camera returns to the playback mode. The index is stored as a new picture.
- · If you want to select the frames again, select RESET and press ( and repeat the procedure from Step 5.
- To cancel the index function, select CANCEL and press ( ).





original movie.

TIPS

Record mode when the movie is	Record mode when stored as
shot	an index
HQ	SQ1 (1024 x 768 pixels)
SQ	SQ2 (640 x 480 pixels)

. The index is stored as a still picture in a different record mode from the



- The interval between the frames that are automatically picked out varies depending on the recording time of the movie.
- · An index consists of 9 frames.
- · You cannot create an index if there is insufficient memory space on the card.


### **6 Useful functions**
 
# MODE RESET - Reset the settings you changed

Return the settings you changed, such as exposure and white balance, to the factory default settings. If you set the camera in the movie mode ( ), it will return to the still picture mode ( PHOTO).



- 1 In the shooting mode top menu, press (\*) to select MODE RESET.



2 Press to select RESET, and press .

"How to use the menus" (P.32)

· The menu is closed.



## **ALL RESET - Saving the camera's settings**

This function lets you choose whether or not to save the current camera settings after the power is turned off. The setting affected by ALL RESET are listed on the next page.

The ALL RESET setting (ON/OFF) applies to all the modes. If ALL RESET is set to OFF in one mode, this setting applies to all the other modes, both shooting and playback.

 All settings are returned to the factory default settings after the power is turned off.

For example: If you set **∢:** to SQ1 before turning off the power, this setting will be returned to the factory default setting, HQ, when the power is turned ON again.

**OFF**: The settings made before the power is turned off are saved.

1 In the top menu, select MODE MENU  $\rightarrow$  SETUP  $\rightarrow$  ALL RESET  $\rightarrow$  OFF or ON, and press 3.

"How to use the menus" (P.32)

• Press ( again to exit the menu.







# ● Functions that All Reset affects and their factory default settings

Function	Factory default setting	Ref. Page
Monitor	OFF	-
Optical Zoom	Wide	P.55
Shooting modes	PHOTO (Still picture)	P.43
SCENE SELECT	P (PROGRAM AUTO)	P.40
DRIVE	(for still pictures)	P.65
DIGITAL ZOOM	OFF (1x)	P.56
<b>\$</b>	AUTO	P.58
⊭	0.0	P.74
ESP/ •	ESP	P.64
WB	AUTO	P.76
<b>4</b> :	HQ (2048 x 1536 pixels)	P.70
₩	OFF	P.61

## **CARD SETUP - Formatting cards**



This function lets you format a card. Formatting prepares cards to receive data. Before using non-Olympus cards or cards which have been formatted on a PC, you must format them with this camera.

All existing data, including protected pictures, are erased when the card is formatted. Make sure that you transfer important data to a PC before formatting a used card.

1 In the top menu, select MODE MENU  $\rightarrow$  CARD  $\rightarrow$  CARD SETUP, and press  $\[ \wp \]$ .

"How to use the menus" (P.32)

- Shooting mode
  The [刊] FORMAT screen is displayed.
- Playback mode
   The CARD SETUP screen is displayed.



If the CARD SETUP screen is displayed, press (a) (b) to select (c) FORMAT, and press (a). When the (c) FORMAT screen appears, press (a) to select YES.







#### 3 Press 🖺.

· The BUSY bar is displayed and the card is formatted.





- · Never do the following during formatting, as they may cause the card to malfunction.
  - · Open the card cover.
  - · Remove the battery.
  - · Connect or disconnect the AC adapter.

# Displaying shooting information INFO

This function lets you display detailed shooting information on the monitor for 3 seconds in the playback mode. For details of the information displayed, see "IS" "Monitor indications" (P.10)".

 Pressing (a) in the playback mode top menu displays the full amount of shooting information on the monitor (ON).

"How to use the menus" (P.32)

 To turn INFO off, press (a) to bring up the top menu and press (a) (OFF).





When INFO is OFF



When INFO is ON



 If the picture has been taken with a different camera, only the date/time, file number and battery level are displayed when INFO is set to ON.

# Adjusting the monitor brightness 🛄



This function lets you adjust the brightness of the monitor. The brightness can be adjusted in either the shooting mode or the playback mode.

When the camera is in the shooting mode, you must turn on the monitor beforehand

In the top menu, select MODE MENU  $\rightarrow$  SETUP  $\rightarrow$   $\square$ , and press

"How to use the menus" (P.32)

- OK button Arrow pad
- 2 Press 👁 🖘 to adjust the brightness of the monitor, and when you have set the desired level, press (\*).
  - · Pressing @ brightens the monitor, and pressing arkens it.
  - Press ( again to exit the menu.



### **REC VIEW**

You can choose whether or not to display the picture you have just taken on the monitor.

ON : The picture being recorded to the card is displayed. This is useful for making a brief check of the picture you have just taken. You can resume shooting anytime during REC VIEW.

OFF : The picture being recorded to the card is not displayed. This is useful when you want to prepare for your next shot while the previous picture is being recorded.

1 In the shooting mode top menu, select MODE MENU → SETUP → REC VIEW → OFF or ON, and press
②.

"How to use the menus" (P.32)







 If the batteries are running low when you take a picture with the monitor off and REC VIEW is set to ON, the picture may not be displayed.

# **Turning the beep sound off**



This function lets you turn on/off the beep sound used for warnings, etc. The beep sound can be adjusted in either the shooting mode or the playback mode.

1 In the top menu, select MODE

MENU → SETUP → ■))) → OFF or

ON, and press ②.

IS "How to use the menus" (P.32)





### **FILE NAME**

The camera automatically creates file names and folder names for images to be stored in. Files can be numbered from 0001 to 9999 and folders can be numbered from 100 to 999. Examples are shown below.

There are two settings from which you can choose: RESET or AUTO. Choose the one that is best for you when transferring images to a PC.

#### File name settings

RESET: The file number and folder number are reset every time a new card is inserted in the camera. The folder number returns to No. 100 and the file number returns to No. 0001. This method is useful when grouping files on separate cards.

AUTO: Even if a new card is inserted, the folder number and file number are retained from the previous card, so the same file number is not used on different cards. This helps you to manage multiple cards. This method is useful when you want to manage all your files with sequential numbers.

1 In the shooting mode top menu, select MODE MENU → SETUP → FILE NAME → RESET or AUTO, and press (②).

"How to use the menus" (P.32)

• Press ( again to exit the menu.





 When the File No. reaches 9999, the file number returns to 0001 and the folder number changes.

.

 When both the Folder and File No. reach their respective maximum number (999/9999), the number of storable pictures becomes 0 even if the card is not full. No more pictures can be taken. Replace the card with a new one.

### **PIXEL MAPPING**

The Pixel Mapping feature allows the camera to check and adjust the CCD and image processing functions. It is not necessary to operate this function frequently. Approximately once a year is recommended. Wait a few minutes after the monitor is used or continuous shots are taken to allow for proper performance of the Pixel Mapping function.

1 In the shooting mode top menu, select MODE MENU  $\rightarrow$  SETUP  $\rightarrow$  PIXEL MAPPING, and press  $\odot$ .

"How to use the menus" (P.32)

· START is displayed.



### 2 Press 🖺 .

 The BUSY bar is displayed during Pixel Mapping. When Pixel Mapping is finished, the screen returns to the mode menu.





 If you accidentally turn the camera off during Pixel Mapping, start again from step 1.

# **VIDEO OUT - Video output selection**

You can select NTSC or PAL according to your TV's video signal type. Select the video signal type before connecting the camera to the TV. If you select the wrong video signal type, the recorded pictures will not be played back properly on your TV. Switching the video signal type between NTSC and PAL can be conducted in either the shooting mode or the playback mode.

1 In the top menu, select MODE

MENU → SETUP → VIDEO OUT →

NTSC or PAL, and press (2).

INST "How to use the menus" (P.32)



- Press ( again to exit the menu.
- The factory default setting varies depending on the area where you purchased this camera.





#### TIPS

#### TV video signal types & main regions

Check the video signal type before using the camera. NTSC: Japan, Taiwan, Korea, North America

PAL: European countries, China

## 7 Print setting

## **How to print pictures**



Several different printing options are available when you want to print out pictures.

#### Printing at a photo lab that supports DPOF or printing on a DPOF-compatible printer

Store the print reservation data on the card. Print reservation allows you to save printing data (number of prints, date/time information, etc.) with the pictures stored on the card.

#### What is DPOF?

DPOF is short for Digital Print Order Format. DPOF is the format used to record automatic print information from digital cameras.

If a card containing print reservation data is taken to a photo lab that supports the DPOF format, the pictures can be printed according to the DPOF reservations.Or pictures can be printed out at home on a personal DPOF-compatible printer.

#### Printing on an Olympus CAMEDIA P-400 or P-200 digital printer

Printing out directly to the printer is possible without using a PC. For more details, refer to the printer's instruction manual.

xD-Picture Card requires a card adapter (optional) to be inserted to the printer.

#### Transferring pictures to a PC and printing them from a printer connected to the PC

If your PC has software applications installed that support JPEG images (internet browser, Paint Shop Pro, Photoshop, etc.), you can print out your pictures on a printer connected to the PC. (Printing is also possible using CAMEDIA Master software.) Check your software before printing. For details, refer to the application software's instructions.



#### TIPS •

#### Picture size and printing

The resolution of a computer/printer is generally based on the number of dots (pixels) per inch. This is called dpi (dots per inch). The higher the dpi value, the better the printed results. Keep in mind, however, that the dpi of the picture does not change. This means that when you print an image with a higher resolution, the size of the printed picture will be smaller. Although you can print magnified images, picture quality will decrease. If you want to print large, high-quality pictures, set the record mode as high as possible when taking the pictures. Provided in the pictures of the pictures are cord mode.



- DPOF reservations set by another device cannot be changed by this camera. Make changes using the original device.
- If a card contains DPOF reservations set by another device, entering reservations using this camera may overwrite the previous reservations.
- The allowable number of pictures for DPOF reservation is 999 frames per card.
- Print reservation may not be available if there is insufficient card memory. In this case, the CARD FULL message is displayed.
- · Not all functions may be available on all printers or at all photo labs.
- Print reservation may take considerable time when saving printing data to a card.

Use this feature to print all pictures stored on the card. Select the desired number of prints and whether you want the date and time included.


- 1 Play back a still picture.
- 2 In the top menu, select MODE MENU  $\rightarrow$  PLAY  $\rightarrow$   $\square$ , and press  $\bigcirc$ .
  - If print reservation data is already stored on the card, the ☐ PRINT ORDER SETTING screen appears, giving you the choice of resetting the data or keeping it. Select KEEP and press (இ).
- 3 Press ⊚ ♥ to select ♣ (all-frame reservation), and press ⊜.





7

#### 5 Perform each setting as illustrated.

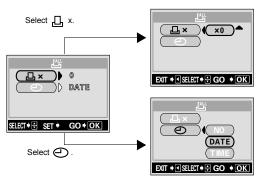

#### Set the number of prints

Press 3 to set the desired number of prints, and press 3. If you want to continue to set the date/time printing data, press 3 to return to Step 4.

: Increases the number.

: Decreases the number.

#### Set the date/time printing data

Press 🖎 🤝 to select NO, DATE or TIME, and press (🖺).

NO : The pictures are printed without the date and time.

DATE : All the pictures are printed with the shooting date.

TIME : All the pictures are printed with the shooting time.

 
 After completing all the print reservations, press (2) to return to the playback mode menu.

## Single-frame reservation



Use this feature to print only selected pictures. It is also used to change the reserved number of prints and the date/time settings. Display the frame to be printed and select the desired number of prints.

- 1 Play back a still picture.
  - You cannot print pictures with 
     \scale
- 2 In the top menu, select MODE MENU  $\rightarrow$  PLAY  $\rightarrow$   $\square$ , and press  $\bowtie$ .







PRINT ORDER screen

- 4 Press the arrow pad to display the frame you want to print, and press (2).
  - You can use the index display feature to select the frames. "Index display" (P.81)



SINGLE PRINT

CANCEL

MORE

#### 5 Select the appropriate item using the arrow pad.

MORE : Sets the number of prints

and date/time.  $\rightarrow$  Go to Step 6.

SINGLE PRINT: Sets single-frame print.

The date/time settings are not available. The

print reservation is set. Return to Step 4.

: Cancels the reservation of the picture displayed on CANCEL

the screen. Resetting print reservation data"

(P.115)

END : Completes the print reservation.  $\rightarrow$  Go to Step 9.

6 Press 🖾 🐨 on the arrow pad to select A x (number of prints) or (date/time), and press (a).



#### Perform each setting.

#### Set the number of prints

Press to set the desired number of prints, and press (\*).

If you want to continue to set the date/time printing data, press (a) to return to Step 6.

Increases the number. 

 $\langle \nabla \rangle$ Decreases the number.



#### Set the date/time printing data

Press 3 5 to select NO, DATE or TIME, and press 8.

NO : The pictures are printed without the date and time.

**DATE**: All the pictures with print reservation

are printed with the shooting date.

**TIME** : All the pictures with print reservation are printed with the shooting time.



- 8 After setting the number of prints and the date/time printing data, press again to complete the print reservations, and return to the screen in Step 4.
  - 🗓 mark is displayed on the image displayed on the screen.
- 9 Press (4) to select END.
  - The ☐ PRINT ORDER screen appears.
  - Press (a) again to display the L PRINT ORDER SETTING screen, and press (a) once more to return to the playback mode menu.



Single-frame reservation menu screen

## Resetting print reservation data



This function allows you to reset the print reservation data for the pictures stored on the card.

There are two ways to reset the print reservation data. One is to reset the print reservation data for all the frames. The other is to reset the print reservation data for the unwanted frames only.

- 1 Play back the still picture marked ☐.
- 2 In the top menu, select MODE MENU  $\rightarrow$  PLAY  $\rightarrow$   $\square$ , and press
  - The PRINT ORDER SETTING screen appears.
- 3 When resetting the print reservation data for all the frames, press ⊚ ॐ to select RESET, and press ⊚.

  To reset the print reservation data for the unwanted frame only, press ⊚ ॐ to select KEEP, and press ⊚.





- PRINT ORDER SETTING screen
- 4 ☐ PRINT ORDER SETTING screen is displayed. Press ② ॐ to select SINGLE PRINT, and press ⑤.
- 5 Use the arrow pad to display the frame that has the print reservation data you want to reset, and press
  - The Single-frame reservation menu screen appears.



- 6 Press (5) to select CANCEL.
  - The selected print reservation data is canceled and the camera returns to the screen in Step 5.



Single-frame reservation menu screen

- 7 When there are not any other print reservation data to be reset, press (a) to display the Single-frame reservation menu screen, and press (a).
- $8 \quad \text{Press } @ \text{ until the screen returns to the mode menu.}$ 
  - Press ( to close the menu.

# 8 Miscellaneous

# **Error codes**

Monitor indication	Possible cause	Corrective action
I] NO CARD	The card is not inserted, or it cannot be recognized.	Insert a card or insert a different card. Wipe the gold contacts with a commercially available cleaning paper and insert the card again. If the problem persists, format the card. If the card cannot be formatted, it cannot be used.
I. CARD ERROR	There is a problem with the card.	This card cannot be used. Insert a new card.
WRITE- PROTECT	Writing to the card is prohibited.	Read-only setting is applied to the card by a PC. Cancel the setting using the PC.
CARD FULL	The card is full. No more pictures can be taken or no more information such as print reservation can be recorded.	Replace the card or erase unwanted pictures. Before erasing, download important images to a PC.
NO PICTURE	There are no pictures on the card.	The card contains no pictures. Record pictures.
PICTURE ERROR	The selected picture has a problem, therefore it cannot be played back on this camera.	Use image processing software to view the picture on a PC. If that cannot be done, the image file is damaged.
CARD COVER OPEN	The card cover is open.	Close the card cover.
CARD SETUP  POWER OFF  [1] FORMA  SEET+ (3) GO+ (0K)	The card is not formatted.	Format the card.

# **Troubleshooting**

#### The camera does not work

The camera does not tu	rn on or function buttons do not respond.	
Possible cause	Corrective action	Ref. Page
The power is off.	Open the lens barrier fully to turn on the camera.	P.22
The batteries are loaded incorrectly.	Reload the batteries correctly.	P.15
The batteries are exhausted.	Replace the batteries with new ones.	P.15
The batteries are temporarily unable to function because of the cold.	Warm the batteries by putting them in your pocket for a while.	-
The camera is in the sleep mode.	Operate the camera (press the shutter button or the zoom lever etc.).	P.23
There is condensation* inside the camera.	Wait until the camera dries before turning it on again.	-
The camera is connected to a PC.	The camera will not operate while it is connected to a PC.	-

<sup>\*</sup>Condensation: When it is cold outside, the water vapor in the air is rapidly cooled and turns to droplets of water.

Condensation occurs when the camera is suddenly taken from a cold place into a warm room.

No picture is taken when	n the shutter button is pressed.	
Possible cause	Corrective action	Ref. Page
The lens barrier is closed.	Open the lens barrier fully.	P.43
The power is off.	Open the lens barrier fully.	P.22
The flash has not finished charging.	Release your finger from the shutter button, and wait until the orange lamp stops blinking. Press the shutter button again.	P.58
The movie just taken is being written to the card.	Release your finger from the shutter button. When the orange lamp stops blinking, resume shooting.	P.12,53
The card is full.	Erase unwanted picture or insert a new card. Before erasing, download important images to a PC.	P.89, 90, 99
The memory gauge is full.	Wait until there is room in the memory gauge.	P.12

There is a problem	Refer to the "Error codes".	P.117
with the card.		

The flash does not fire.		
Possible cause	Corrective action	Ref. Page
The flash is set to the flash off mode.	Select a flash mode other than flash off.	P.58
The subject is illuminated.	If you want the flash to fire on a brightly illuminated subject, set the flash to fill-in mode.	P.58
Sequential shooting or movie mode is set.	The flash does not fire in the sequential shooting or movie mode.  Set in the DRIVE menu.	P.65
Panorama mode is set.	The flash does not fire in the panorama mode. Cancel the panorama mode.	P.66

The green and orange lamps on the right of the viewfinder blink simultaneously.			
Possible cause	Corrective action	Ref. Page	
The batteries are exhausted.	Replace the batteries with new ones.	P.15	

The monitor does not turn on.			
Possible cause	Corrective action	Ref. Page	
The camera is in the sleep mode.	Operate the camera (press the shutter button or the zoom lever etc.).	P.23	
The camera is taking pictures in sequence.	During sequential shooting, the subject does not appear on the monitor.	P.65	

The monitor is hard to see.			
Possible cause	Corrective action	Ref. Page	
The brightness is not adjusted properly.	Select in the mode menu and then adjust the brightness.	P.102	
The monitor is exposed to direct sunlight.	Block the sunlight with your hand.	-	
Vertical lines appear on the monitor screen.	Bright light, such as direct sunlight, may cause vertical lines to appear on the monitor screen. This is not a malfunction.	-	

Pictures you have taker	do not appear on the monitor.	
Possible cause	Corrective action	Ref. Page
The power is off.	Close the lens barrier, and press to turn the monitor on.	P.23, 78
The camera is in the shooting mode.	Press  quickly twice, or close the lens barrier and then press to switch to the playback mode.	P.23, 79
There are no pictures on the card.	NO PICTURE appears on the monitor. Record pictures.	1
There is a problem with the card.	Refer to the "Error codes".	P.117
The camera is connected to a TV.	The monitor does not function when the video cable is connected to the camera.	P.84

The date recorded with the image data is wrong.			
Possible cause	Corrective action	Ref. Page	
The date/time is not set.	Set the date/time. The clock adjustment is not factory-preset.	P.28	
The batteries are exhausted.	When the batteries run out, the date/time setting is canceled or becomes inaccurate. Replace the batteries with new ones and set the date/time again.	P.15, 28	
The camera has been left with the batteries removed.	If the camera is left for a while with the batteries removed, the date/time setting is canceled. Set the date/time again.	P.15, 28	

The settings are returned to the factory default settings when the camera is turned off.			
Possible cause	Corrective action	Ref. Page	
All Reset is set to ON.	Select the SETUP tab in the mode menu and set All Reset to OFF.	P.97	

No picture is displayed on the TV when connected to the camera.		
Possible cause	Corrective action	Ref. Page
The video output signal is incorrect.	Set the video output signal according to the region where used.	P.107
The camera is not in the playback mode.	Press quickly twice, or close the lens barrier and then press to switch to the playback mode.	P.23, 79
The TV video signal setting is incorrect.	Set the TV to the video input mode.	P.84

## The image quality is poor

The picture is too bright.		
Possible cause	Corrective action	Ref. Page
The flash was set to the fill-in flash mode.	Select a flash mode other than fill-in flash.	P.58
The subject was excessively illuminated.	Adjust the exposure compensation toward minus (-) or change the camera position.	P.74

The picture is too dark.		
Possible cause	Corrective action	Ref. Page
The flash was blocked by your finger.	Hold the camera correctly, keeping your fingers away from the flash.	P.30
The subject was out of the working range of the flash.	Shoot within the flash working range.	P.58
The flash was set to the flash off mode.	Select a flash mode other than flash off.	P.58
The subject was too small and was backlit.	Set the flash to fill-in mode, or use the spot metering mode.	P.58, 64
The sequential shooting mode was used.	Higher shutter speeds are used when the sequential shooting mode is selected, which may result in pictures that are darker than usual. Select in the DRIVE menu.	P.65
Bright subjects such as snow will turn out darker than their natural colors in the image.	Adjust the exposure compensation toward +.	P.74

The colors of pictures taken indoors look unnatural.		
Possible cause	Corrective action	Ref. Page
Indoor lighting can affect the picture's colors.	Set the white balance according to the lighting.	P.76
There is no white in the subject.	Include something white in the picture, or shoot using the fill-in flash mode.	P.58
The white balance setting is wrong.	Adjust the white balance according to the light source.	P.76


The picture has obscured edge(s).			
Possible cause	Corrective action	Ref. Page	
The lens was partly blocked by your finger or the strap.	Hold the camera correctly, keeping your fingers and the strap away from the lens.	P.30	
The subject was too close.	Check the actual picture area by using the monitor to take the picture.	P.45	

The picture is out of focus.		
Possible cause	Corrective action	Ref. Page
The camera moved when the shutter button was pressed.	Hold the camera correctly and press the shutter button gently.  Camera movement occurs easily with slower shutter speeds. When you take a picture with the flash off mode in a night scene or a dark situation, use a tripod, or hold the camera firmly.	P.30
The lens was dirty.	Clean the lens. Use a commercially available blower blush and then wipe with a Lens cleaner to remove dust. Mold may form on the lens surface if the lens is left dirty.	-
The focus may not be correct even if the green lamp lights.	Determine the position of the subject after focusing the camera on an object about the same distance away as the subject.	P.48

The life of the batteries is short.			
Possible cause	Corrective action	Ref. Page	
The camera is being used in a cold area.	The battery performance decreases in cold areas. Protect the camera from the cold by using a cold protection gear, or by putting it inside your clothes.	-	
The correct battery level is not displayed.	Batteries can run out without a warning message when the amount of power consumed increases considerably. Replace with new batteries.	P.15	


## **List of menus**


Shooting mode menus
 PH0T0 (P / ♠ / ♠ / ₺ / ₺)

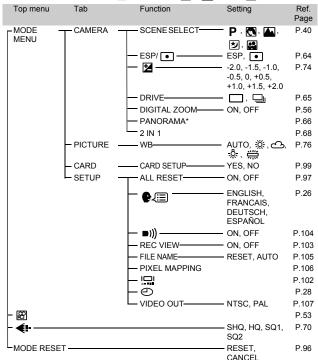


\* Cannot be selected in R mode.

#### ● Shooting mode menus ( 🎛 )

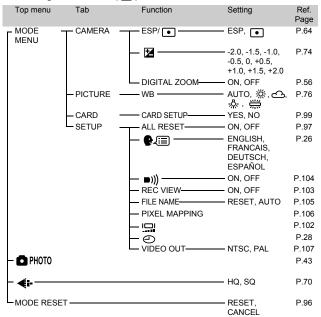

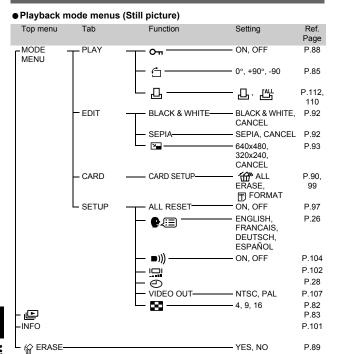

#### ● Playback mode menus ( 🍄 )

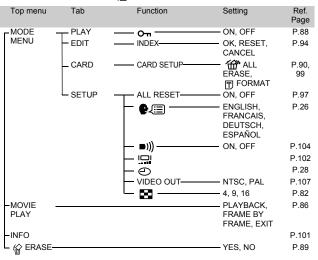

# List of factory default settings

#### Shooting mode

\$	AUTO
*	OFF
<b>উ</b>	OFF
Shooting mode	PH0T0 (Still picture)
SCENE SELECT	P (PROGRAM AUTO)
Zoom	Wide
Monitor	OFF
ESP/ •	ESP
<b>∢</b> !·	HQ
<b>½</b>	0.0
DRIVE	(Single-frame shooting)
DIGITAL ZOOM	OFF
PANORAMA	OFF
2 IN 1	OFF
WB	AUTO
FILE NAME	RESET

#### Playback mode

	OFF
凸	OFF
INFO	OFF
Отп	OFF
	0°
8	9

#### Other default settings

• Other adiable dotting	
ALL RESET	ON
€:	ENGLISH
<b>■</b> 1))	ON
REC VIEW	ON
i	±0
0	2003.01.01
VIDEO OUT	*

<sup>\*</sup> Setting differ according to the region where the camera is sold.

# List of items by shooting mode

Shooting mode Item	Р			*		<b>2</b>
*	✓	✓	✓	✓	<b>✓</b>	✓
4	✓	✓	✓	✓	✓	_
<b>৩</b>	✓	✓	✓	✓	<b>√</b>	✓
Optical zoom	✓	✓	✓	✓	W (Wide) fixed	✓
ESP/	✓	✓	✓	✓	✓	✓
<b>∢</b> !-	✓	✓	✓	✓	✓	√*
Z	✓	✓	✓	✓	<b>√</b>	✓
	✓	✓	✓	_	✓	_
DIGITAL ZOOM	✓	✓	✓	✓	_	✓
PANORAMA	✓	✓	✓	✓	_	_
2 IN 1	✓	✓	✓	✓	✓	_
WB	✓	✓	✓	✓	✓	✓
CARD SETUP	✓	✓	✓	✓	✓	✓
ALL RESET	✓	✓	✓	✓	<b>√</b>	✓
<b>■</b> )))	✓	✓	✓	✓	✓	✓
REC VIEW	✓	✓	✓	✓	✓	✓
FILE NAME	✓	<b>√</b>	✓	✓	✓	✓
101	✓	<b>√</b>	✓	✓	✓	✓
0	✓	✓	✓	✓	✓	✓

<sup>\*</sup> In the movie record mode, only HQ/SQ can be selected.

## **Camera maintenance**

#### After use

Turn the camera off.

#### Cleaning the camera

- 1 Close the lens barrier to turn the camera off.

  Make sure that the monitor is turned off.
- 2 Remove the batteries (psp. P.15). (If you are using an AC adapter, unplug the AC adapter from the camera first before removing the plug from the AC outlet.)

#### 3 Exterior:

→ Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and well wrung.

#### Monitor and viewfinder:

→ Wipe gently with a soft cloth.

#### Lens:

→ Blow dust off the lens with a commercially available blower, and wipe qently with a lens cleaning paper.

#### Card:

→ Wipe gently with a soft, dry cloth.



- Do not use strong solvents such as benzene or alcohol, or chemically treated cloth
- Cleaning should be done only after the batteries have been removed or the AC adapter has been disconnected.
  - · Mold may form on the lens surface if the lens is left dirty.

## **Specifications**

: Digital camera (for shooting and displaying) Product type

Recording system

Still picture : Digital recording, JPEG (in accordance with

Design rule for Camera File system (DCF)), Exif 2.2 compatible, Digital Print Order Format (DPOF), PRINT Image Matching II compatible

: QuickTime Motion JPEG support Movie

Memory : xD-Picture Card (16 - 256 MB) No. of storable pictures

When a 16 MB card

: Approx. 6 frames (SHQ: 2048 x 1536) is used

Approx. 20 frames (HQ: 2048 x 1536) Approx. 76 frames (SQ1: 1024 x 768) Approx. 165 frames (SQ2: 640 x 480)

No. of effective pixels : 3.200.000 pixels

Image pickup device : 1/2.5" CCD solid-state image pickup, 3,340,000

pixels (gross)

: Olympus lens 5.8 to 17.4 mm, f3.1 to 5.2, Lens

5 elements in 3 groups

(equivalent to 35 mm to 105 mm lens on 35 mm

camera)

Photometric system : Digital ESP metering, spot metering

: 1/2 to 1/1000 sec. (2 sec. For the NIGHT SCENE Shutter speed

mode)

Shooting range : 50 cm (1.6 ft.) to ∞ (normal)

20 cm to 50 cm (0.7 ft. to 1.6 ft.) (macro mode)

Viewfinder : Optical real image viewfinder

Monitor : 1.8" TFT color LCD display, 85,000 pixels Outer connector

: DC-IN jack, USB connector (mini-B), VIDEO OUT jack

Automatic calendar : Up to 2099

system

Operating environment

Temperature : 0°C to 40°C (32°F to 104°F) (operation) -20°C to 60°C (-4°F to 140°F) (storage)

Humidity : 30% to 90% (operation)/10% to 90% (storage)

Power supply : 1 CR-V3 lithium battery pack, or 2 AA (R6)

alkaline batteries or NiMH batteries.

AC adapter (optional)

Manganese (zinc-carbon) batteries cannot be

used.

Dimensions : 108 mm (W) x 57.5 mm (H) x 40 mm (D)

(4.2" x 2.2" x 1.6")

(excluding protrusions)

Weight : 170 g (0.4 lb) (without batteries or card)

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT ANY NOTICE OR OBLIGATION ON THE PART OF THE MANUFACTURER.

## **Glossary of terms**

#### CCD (Charge-Coupled Device)

This converts light passing through the lens into electrical signals. On this camera, light is picked up and converted into RGB signals to build a single image.

#### DCF (Design rule for Camera File system)

A standard for image files by the Japan Electronics and Information Technology Industries Association (JEITA).

#### Digital ESP (Electro-Selective Pattern) Light Metering

This determines the exposure by metering and calculating the light levels in the center and other areas of the image separately.

#### **DPOF (Digital Print Order Format)**

This is for saving desired print settings on digital cameras. By entering which images to print and the number of copies of each, the user can easily have the desired images printed by a printer or print lab that supports the DPOF format.

#### JPEG (Joint Photographic Experts Group)

A compression format for color still images. Photographs (images) shot using this camera are recorded onto the card in JPEG format when the Record mode is set to SHQ, HQ or SQ. By downloading these images to a personal computer, users can edit them using graphics application software or view the images using an Internet web browser.

# NTSC (National Television Systems Committee) / PAL (Phase Alternating Line)

Television formats. NTSC is mainly used in Japan, North America and Korea. PAL is mainly used in Europe and China.

#### Pixels

A pixel is the smallest unit (dot) used to make up an image. Clear large-sized printed images require millions of pixels.

#### Resolution

The size of the picture expressed as the number of dots (pixels) that make up the image. For instance, a picture taken in  $640 \times 480$  resolution is the same size as the PC screen when the monitor setting is  $640 \times 480$ . However, if the monitor setting is  $1024 \times 768$ , the picture only takes up part of the screen.

#### Sleep Mode

A mode designed to save battery life. The camera automatically enters the sleep mode if you do not operate it for a certain time. To get out of the sleep mode, use any button on the camera (shutter button, arrow pad, etc.).

#### **TFT (Thin-Film Transistor) Color Monitor**

A color monitor constructed using thin-film transistor technology.

# Index

A	E
AC adapter	ESP metering
Adjusting the monitor brightness	Exposure compensation 🔁 74
AF target mark 9,10,43,48	F
ALL RESET	FILE NAME
All-frame erase 🏠 90	File number
All-frame reservation 4 110	Fill-in flash <b>‡</b> 60
Arrow pad	Flash
Auto focus 50	Flash charge 10,45
Auto-flash 59	Flash mode
_	Flash off <b>3</b> 60
В	Flash standby 10,45
Batteries	Fluorescent 💢76
Battery check	Focus Lock
Battery compartment cover 9,15	Format99
Beep sound <b>■)))</b> 104	_
•	G
C	Green lamp9,43
Camera movement warning 10	
Card	Н
Card check	HQ70
Card cover	
Close-up playback Q 80	I
Connector cover 8	INDEX94
Contact area	Index area
Creating black and white pictures	Index display 🚹 81,82
	INFO101
Creating sepia-toned pictures 92	
	L
D	Landscape
DC-IN jack 8	Language ♣
Digital zoom 56	Lens
DPOF 108	Lens barrier
	M
	Macro mode
	Memory gauge

Metering       64         Mode Menus       31,32,36         MODE RESET       34,96         Monitor       9,10,45         Monitor button □       9,79         Movie □       41,53         MOVIE PLAY □       86	R REC VIEW
N	Resizing 🖳
Night scene       ★	Resolution
Number of storable still pictures10,70	Seconds remaining
OK/Menu button       9         Optical zoom       55         Orange lamp       9,43         Overcast       76	Self-timer \$\circ\$ .63 Self-timer lamp65 Sequential shooting \$\subseteq \circ\$ .65 Setting the date and time \$\lfloor .28 Shooting mode10,22,40 Shortcut Menus31,34 SHQ70
<b>P</b> PAL	Shutter button
Printing rotation ( 85 PIXEL MAPPING 106	Single-frame reservation112 Sleep mode
Playback button ►	Slideshow
Playback on a TV 84	SQ
Playing time	Strap
Pressing fully	Strap eyelet
Pressing halfway	Sunlight 🔆76
PROGRAM AUTO P	Т
Protect <b>O-n</b>	Top menu
Q	Tripod socket9
QUICK VIEW79	Tungsten - Д

U
USB connector 8
V
Video cable 84
VIDEO OUT
VIDEO OUT jack 8
Viewfinder 9,43
W
White balance <b>WB</b>
x
xD-Picture Card
XD-1 lottile Gald
z
=
Zoom lever 8,55,80,81



http://www.olvmpus.com/

#### OLYMPUS OPTICAL CO., LTD. =

Customer support (Japanese language only): Tel. 0426-42-7499 Tokyo

#### OLYMPUS AMERICA INC. =

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000

#### Technical Support (USA)

24/7 online automated help: http://support.olympusamerica.com/ Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm

(Monday to Friday) ET E-Mail: distec@olympus.com

Olympus software updates can be obtained at: http://olympus.com/digital/

#### OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstrasse 14-18, 20097 Hamburg, Germany

Tel. 040-23 77 33

Letters: Postfach 10 49 08, 20034 Hamburg, Germany

#### **European Technical Customer Support:**

Please visit our homepage http://www.olympus-europa.com or call our TOLL FREE NUMBER: 00800 - 67 10 83 00

for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom

 Please note some (mobile) phone services/provider do not permit access or request an additional prefix to +800 numbers.

 
For all not listed European Countries and in case that you can't get connected to the above mentioned number please make use of the following

CHARGED NUMBERS: +49 180 5 - 67 10 83 or +49 40 - 237 73 899
Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)

© 2003 OLYMPUS OPTICAL CO., LTD.



# CVWEDIV



DIGITAL CAMERA — PC CONNECTION

OPERATION MANUAL

How to use your PC to get the most from images taken with your digital camera.

- Thank you for purchasing an Olympus digital camera.
- This manual provides instructions on how to install the USB driver. To ensure correct installation, refer only to these installation procedures.

#### Introduction

This manual explains in detail how to connect your Olympus digital camera to a computer. Read it carefully and keep it in a safe place for future reference.

#### About this manual

- The information contained in this manual may be subject to change without notice. For the latest information on the product, please consult your local Olympus representative.
- The information contained in this manual has been compiled by taking all
  possible measures to ensure its accuracy. However, if you find any errors or
  incomplete information, please contact your local Olympus representative.
- It is prohibited by copyright laws to duplicate in part or in whole the information contained in this manual, except for personal use. Reproduction without permission of the copyright owner is prohibited.
- The PC screens shown in this manual may differ slightly from the actual displays on some PC models.

#### **Trademarks**

- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Computer Inc.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.

### INDEX

Flowchart .	 -	•	•	•		•	•	•	•	•	•	•	•		-	4	

Identifying the OS .....6


Windows (98/Me/2000/XP) . . . . . . . . . 8

Macintosh (OS 9/X)......23

Downloading image files using other OS (For other OS users)......31

#### **Flowchart**

By connecting the camera to a computer with the provided USB cable, images on a card can be transferred to the computer. Some OS's (operating systems) may need a special setup before connecting to the camera for the first time. Follow the chart below.

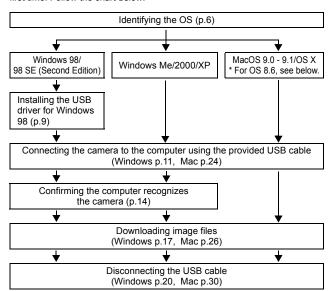

- Even if your computer has a USB connector, data transfer may not function correctly if you are using one of the operating systems listed below or if you have an add-on USB connector (extension card, etc.).
- Windows 95/NT 4.0
- Windows 98/98 SE upgrade from Windows 95
- Mac OS 8.6 or lower (except Mac OS 8.6 equipped with USB MASS Storage Support 1.3.5 installed at the factory)
- Data transfer is not guaranteed on a home-built PC system or PCs with no factory installed OS.



- When connecting the camera to the computer, make sure that there is sufficient remaining battery power. When connected (transmitting) to the computer, the camera does not enter the sleep mode nor will the camera's power turn off automatically. Depending on the camera model, when the battery power runs out or the internal temperature rises, the camera may stop operating automatically. This could cause the computer to malfunction, and any image data (file) being transmitted may be lost. Be careful when downloading files for a long period of time. Use the AC adapter (optional) when downloading files.
- If you connect or disconnect the AC adapter when the camera is connected
  to the computer and is running on battery power, it may result in the loss of
  image data on the card or cause a malfunction in the computer. Before
  connecting or disconnecting the AC adapter, disconnect the camera from
  the computer and make sure that the camera is turned off.
- To avoid computer malfunctions, do not turn off the camera when the camera is connected to a computer.
- If the camera is connected to the computer via a USB hub, operation may not be stable if there are any compatibility problems between the computer and the hub. In such cases, do not use the hub and connect the camera directly to the computer.



- You can view images using: graphics applications that support the JPEG file format (Paint Shop Pro, Photoshop, etc.); Internet browsers (Netscape Communicator, Microsoft Internet Explorer, etc.); CAMEDIA Master software; or other software. For details on using commercial graphics applications, refer to their instruction manuals.
- QuickTime is needed for playing back movies. QuickTime is included on the provided software CD.
- If you want to process images, make sure to download them to your computer first. Depending on the software, image files may be destroyed if the images are processed (rotated, etc.) while they are on the card.

## **Identifying the OS**

Identify the OS on your computer before connecting the camera. How to identify the OS depends on the computer.

### Windows

Double-click the "My Computer" icon on your desktop.

When the "My computer" icon is not on your desktop, click "Control Panel" from the "Start" menu.



2 Double-click the "Control Panel" icon.



3 Double-click the "System" icon.



Note

The way the file icons inside the folder appear may vary depending on your version of Windows. If you don't see the icon you are looking for, click on "view all Control Panel options" on the left of the window.



# A System Properties window will appear. Note and record the "System:" information.

Confirm that your system is Windows 98, 98 SE, Me, 2000 Professional or Windows XP, then press "OK" to close the window.




If your OS is Windows 98/98 SE, proceed to "Installing the USB driver for Windows 98" (137 p.9).

Users running Windows Me/2000/XP 137 p.11

Users running other OS 138 p.31

## Mac OS (Macintosh)

Select "About This Computer" from the Apple menu on the menu bar. A window appears with the name of the computer's OS. Confirm that the OS is OS 9 0-9 1 or OS X

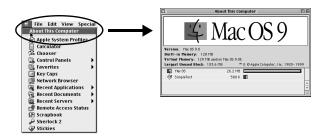

Users running Mac OS 9/X № p.23 Users running other OS № p.31

## **Windows**

## Using Windows 98/Me/2000/XP

#### Make sure that:

- Your computer is turned on and Windows is running.
- If you are running any applications, quit them all.
- You are recommended to power the camera using the optional AC adapter. If the battery power runs out while the computer is accessing the card in the camera, the camera will turn off in the middle of the operation and this could destroy image files (data). If you are using batteries, make sure that there is sufficient remaining battery power.

Installing the USB driver for Windows 98 (When using Windows 98/98 SE)9
Connecting the camera to the computer11
Confirming the computer recognizes the camera14
Confirming the USB driver is installed15
Downloading images to your computer17
Disconnecting the camera from your computer 20

## Installing the USB driver for Windows 98 (When using Windows 98/98 SE)

If your OS is Windows 98/98 SE, you must install the USB driver. Follow the instructions below to install the USB driver in your computer. Once it is fully installed, you do not need to repeat the procedure again.

If your OS is Windows Me/2000/XP, you do not need to install the USB driver. Proceed to "Connecting the camera to the computer" ( ) 11.

Insert the provided software CD into your CD-ROM drive.



2 The Olympus Windows Installer should automatically launch. Click "USB Driver".

If the USB driver is already installed in your computer, this option will not appear.

 This option will not appear if you are using Windows Me/2000/XP.



If the installer is not automatically launched, select "Run.." on the "Start" menu and then execute "(drive letter):/ Information.exe".



The drive letter of the CD-ROM varies depending on the computer. To identify the drive letter, double-click "My Computer" on the desktop.

\_\_\_\_\_

3 Click "Continue". The installation of the USB driver will start.



4 Click "OK" to restart your computer and the installation is complete.




When the computer has restarted, installation is complete. If the Olympus Windows Installer screen appears, click "Close" and remove the CD-ROM from the CD-ROM drive.

## **Connecting the camera to the computer**

Users running Windows 98/98SE need to install the USB drive before connecting the camera to your computer for the first time. (1287 p.9)

Insert the marked end of the provided USB cable into the USB port on your computer as shown below.

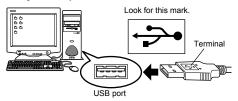



Note

The location of the USB port varies depending on the computer. For details, refer to your computer's manual.

After making sure that the camera is turned off, connect the end of the USB cable to the USB connector on the camera.

  The location of the USB connector or multi connector varies depending on the camera model. Refer to the camera manual for details.






## 3 Turn the camera on.


#### Camera with a lens barrier

The power turns on automatically, with the exception of some models which require you to press the (monitor) button.

When the camera is turned on, the lamp on the right of the viewfinder lights up.

 ● Camera with a ▶ mode
Set the mode dial to ▶ . (If the camera has a power switch as well as a mode dial, turn the power switch to ON.)



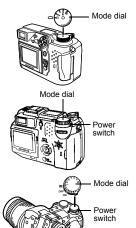

 Camera with a <sup>™</sup> mode (Camera setup/connection mode)

Set the mode dial to vo to turn the camera on



### The computer recognizes the camera as a new device.

When you connect the camera to the computer for the first time, the computer automatically recognizes the camera. Click "OK" when the message saying that the installation is completed appears. The computer recognizes the camera as a "Removable Disk".

#### Windows XP

You can download image files from the camera easily. Select "Copy pictures to folder on my computer using Microsoft Scanner and Camera Wizard", then follow the on-screen instructions. You may also select "take no action" to bypass the Microsoft Scanner and Camera Wizard. You may then use a more advanced image viewing/editing program such as Olympus CAMEDIA Master software. For detailed instructions on downloading, refer to the CAMEDIA Master software user's guide.



When the camera is connected to the computer, none of the camera buttons are functional.

## Confirming the computer recognizes the camera

Double-click the "My Computer" icon on the desktop.

For users running Windows XP, click "My Computer" from the "Start" menu.



Make sure the "Removable Disk" icon appears in the window.

There may already be other "Removable Disk" icons for other devices, such as a removable media drive or USB SmartMedia Reader/ Writer. In this case, the digital camera is recognized as another "Removable Disk".

If you cannot find the icon, the camera and computer are not connected properly. Turn the camera off, disconnect the camera from the



computer and connect again, or proceed to "Confirming the USB driver is installed" (ISF p.15) to make sure that the USB driver is fully installed.

## **Confirming the USB driver is installed**

If the computer does not recognize the camera as a Removable Disk, follow the procedure below to check whether the USB driver has been fully installed.

1 Open "My Computer" and double-click the "Control Panel" icon. For users running Windows XP, open "Control Panel" from the "Start" menu.



2 Double-click the "System" icon.



3 The System window will appear. Click the "Device Manager" tab.





# Confirm that "OLYMPUS Digital Camera" is in the "Universal Serial Bus Controller" category.

If you cannot find the "OLYMPUS Digital Camera", turn the camera off, disconnect the camera from the computer and start again.
Users running Windows 98/98 SE start again from "Confirming the USB driver is installed", and Users running Window Me/2000/XP start from "Connecting the camera to the





computer".

 
If the USB driver was successfully installed, you can find the following in the "Device Manager".

- the name of the camera you have connected listed under "Disk drives"
- "OLYMPUS Digital Camera" listed as one of the items in the "Universal Serial Bus Controller" category

## **Downloading images to your computer**

Double-click the "My Computer" icon on the desktop.

For users running Windows XP, click "Control Panel" from the "Start" menu.



2 Double-click the "Removable Disk" icon.

A new "Removable Disk" icon appears when the camera is connected to the computer, as the digital camera is recognized as a "Removable Disk".



Note

If an error message appears when you double-click the icon, there may be a problem with one of the following:

- the camera's power source (the AC adapter is not properly connected or the battery power is low)
  - Make sure that the AC adapter is correctly connected or that the batteries are not running low.
- ② the card (there is no card in the camera or there is a problem with the card)
  Check that you can play back pictures stored on the card on the monitor of your digital camera.
- 3 Double-click the "Dcim" folder.



4


### Double-click the "100olymp" folder.

Image files (JPEG files) with files names such as "P1010001.jpg" are displayed.



Note

  The camera automatically assigns folder names and file names according to the following rules.



- · Serial numbers of image files run from 0001 to 9999.
- Serial numbers of folders run from 100 to 999
- When file number 9999 is reached, a new folder is created and assigned the next number.
- Months January through September are expressed by the numbers 1 through 9, October by the letter A, November by B and December by C.

## 5 Double-click the "My Documents" icon on the desktop.

If you cannot find the icon on the desktop, select "Explorer" on the Start menu and double-click the "My Documents" icon.

 


The "My Documents" window is displayed.



Drag & drop the image you want to save in the computer (in this case, P1010012.jpg) to the "My Documents" window.

The image is saved in the computer (in My Documents folder).





When the image file has been downloaded to the computer, you can view images by double-clicking the image files downloaded to your computer. The files will be opened in the default image viewer of the operating system. If you want to view the image a different size or process it, you will need to open the image with software that supports JPEG or TIFF images files, such as Paint Shop Pro, Photoshop or CAMEDIA Master software.



The lamp on the right of the viewfinder or the card access lamp blinks while the image is being copied. Never open the card cover on the camera, load or remove the batteries, or connect or disconnect the AC adapter while the lamp is blinking as the image files may be destroyed.

## **Disconnecting the camera from your computer**

If your OS is Windows Me/2000, proceed to "Windows Me/2000/XP" (LSP p.21).

 
### Windows 98

- Make sure that the lamp on the right of the viewfinder or the card access lamp is not blinking. Some camera models have either a lamp on the right of the viewfinder or a card access lamp, and the location varies depending on the model. Refer to your camera's reference manual.
- Double-click the "My Computer" icon and right-click the "Removable Disk" to display the menu.
- $\it 3$  Click "Eject" on the menu.






Make sure that the lamp on the right of the viewfinder or the card access lamp is not blinking.



5 Remove the USB cable from the camera.



 
6 Remove the USB cable from your computer.



## Windows Me/2000/XP

Make sure that the lamp on the right of the viewfinder or the card access lamp is not blinking.
Some camera models have either a

 Some camera models have either a lamp on the right of the viewfinder or a card access lamp, and the location varies depending on the model. Refer to your camera's reference manual.



Click the "Unplug or Eject Hardware" icon on the task bar.

The message saying that the drive has been stopped appears.

3 Click on the message. The "Unplug or Eject Hardware" window appears.

4 When a message appears, click "OK".






5 Remove the USB cable from the camera.



 $oldsymbol{6}$  Remove the USB cable from your computer.

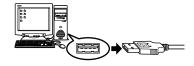



If the window returns the following message when you click "Unplug or Eject Hardware", first make sure that no image data is being downloaded from the camera, and then remove the USB cable.



## **Macintosh**

## Using Mac OS (9/X)

#### Make sure that:

- Your computer is turned on and Mac OS is running.
- If you are running any applications, quit them all.
- You are recommended to power the camera using the optional AC adapter. If the battery power runs out while the computer is accessing the card in the camera, the camera will turn off in the middle of the operation and this could destroy image files (data). If you are using batteries, make sure that there is sufficient remaining battery power.

If you are running Mac OS X, the connection to the computer and downloading the image data are verified. Restrictions such as the following may occur due to the OS.


- The image file properties are not displayed correctly.
- Images in the camera cannot be opened without first downloading them. etc.

For more details, visit the Olympus web site.

Connecting the camera to the computer	24
Downloading images to your computer	26
Disconnecting the camera from your computer	30

## **Connecting the camera to the computer**

 Insert the marked end of the USB cable into the USB port on your computer as shown below.







The location of the USB port varies depending on the computer. For details, refer to your computer's manual.

After making sure that the camera is turned off, connect the end of the USB cable to the USB connector on the camera.

 The location of the USB connector or multi connector varies depending on the camera model. Refer to the camera manual for details.

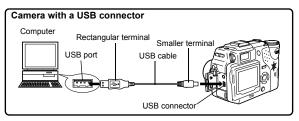



### 3 Turn the camera on.

#### Camera with a lens barrier

 
The power turns on automatically, with the exception of some models which require you to press the (9) (monitor) button.

When the camera is turned on, the green lamp on the right of the viewfinder lights up.

Lamp
Lens barrier


(monitor) button

#### 



 Camera with a ⋈ mode (Camera setup/connection mode)

 Set the mode dial to  $\sim$  to turn the camera on



untitled

## 4

## The computer recognizes the camera as a new device.

The computer recognizes the camera automatically and an "Untitled" icon appears on the desktop.

If you cannot find this icon, turn off the camera and connect again.

#### Mac OS X

When the computer has recognized the camera, the Apple Image Capture software automatically launches. 

© p.29



 
When the camera is connected to the computer, none of the camera buttons are functional.

## **Downloading images to your computer**

#### Mac OS 9

You can download images from the camera and save them in your computer (in this case, in the Hard Disk).

 Double-click the "Untitled" icon displayed on the desktop when the camera is connected to the computer.






If you cannot find this icon, or if an error message appears when you doubleclick the icon, there may be a problem with one of the following:

- the camera's power source (the AC adapter is not properly connected or the battery power is low)
- ② the card (there is no card in the camera or there is a problem with the card)
  Check that you can play back pictures on the monitor of your camera.
- ③ the USB cable (the camera is not properly connected to the computer by the USB cable).
- Apple "File Exchange" extension is not enabled.
  - Please refer to your Apple operating system manual for instructions on how to enable this extension.

  
2 Double-click the "Dcim" folder.



3 Double-click the "1000LYMP" folder.

 


Image files (JPEG files) with files names such as "P1010001.JPG" are displayed.



 


 The camera automatically assigns folder names and file names according to the following rules.



- · Serial numbers of image files run from 0001 to 9999.
- · Serial numbers of folders run from 100 to 999.
- When file number 9999 is reached, a new folder is created and assigned the next number.
- Months January through September are expressed by the numbers 1 through 9, October by the letter A, November by B and December by C.

4 Double-click the "Macintosh HD" icon on the desktop.




The "Hard Disk" window is displayed.



5 Drag & drop the image you want to save in the computer (in this case, P1010012.JPG) to the "Hard Disk" window.

> The image is saved in the computer (in the Hard disk).

  To select all images, click Edit > Select all.





When the image file has been copied to the computer, you can view images by double-clicking the image files in the "Hard Disk" folder. The files will be opened in the default image viewer of the operating system. If you want to view the image a different size or process it, you will need to open the image with software that supports JPEG or TIFF images files, such as Paint Shop Pro, Photoshop or CAMEDIA Master software.



The lamp on the right of the viewfinder or the card access lamp blinks while the image is being copied. Never open the card cover on the camera, load or remove the batteries, or connect or disconnect the AC adapter while the lamp is blinking as the image files may be destroyed.

ug Action: | Image Capture Applicatio

Download Some... Download All

## Mac OS X

Malfunctions such as the following may occur due to the OS.

- · If the camera is not connected correctly, a malfunction occurs in the computer.
- Date and time information of image files is not accurately displayed.
- If the card cover of the camera is opened while connecting to the computer, the "untitled" icon does not disappear from the desktop. etc.

When the computer has recognized the camera, the Apple Image Capture software dialog appears.

- From the "Download To" menu. select a destination folder.
- 2 To download all images, click "Download All". To selectively download images.

click "Download Some" and highlight the desired images.

The images are transferred from the camera to your computer.




If you are operating Mac OS X and you want to download images using the same procedure as for Mac OS 9, select "File > Close" and exit the Apple Image Capture software. At this time, the camera is indicated as "unlabeled".




If you use the Apple Image Capture software, images downloaded to your computer and transferred back to a card may not play back on the camera or may have other problems.

## Disconnecting the camera from your computer

Make sure that the lamp on the right of the viewfinder or the card access lamp is not blinking.

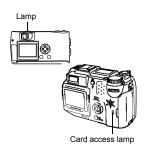

 
- 2 Drag the "untitled" icon on the desktop to "Trash".
- 3 Make sure that the lamp on the right of the viewfinder or the card access lamp is not blinking.





 - 4 Remove the USB cable from the camera.
- 5 Remove the USB cable from your computer.






## Downloading image files using other OS (For other OS users)

Users running other OS cannot connect the camera directly to a computer.


#### Windows 95 Windows NT Mac OS before OS 9

You can download images directly to your computer using an optional floppy disk adapter or PC card adapter.

## Does your computer have a USB interface? Is there a port marked on your computer?

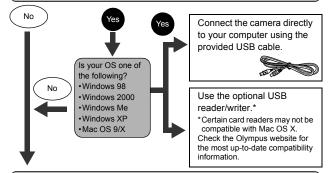

#### Does your computer have a built-in PC card slot?

 

#### Does your computer have a built-in floppy disk drive?



Consult your nearest Olympus representative.



http://www.olvmpus.com/

#### OLYMPUS OPTICAL CO., LTD. =

Customer support (Japanese language only): Tel. 0426-42-7499 Tokyo

#### OLYMPUS AMERICA INC. =

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000

#### Technical Support (USA)

24/7 online automated help: http://support.olympusamerica.com/ Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm

(Monday to Friday) ET

E-Mail: distec@olympus.com

Olympus software updates can be obtained at: http://olympus.com/digital/

#### OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstrasse 14-18, 20097 Hamburg, Germany

Tel. 040-23 77 33

Letters: Postfach 10 49 08, 20034 Hamburg, Germany

#### **European Technical Customer Support:**

Please visit our homepage http://www.olympus-europa.com or call our TOLL FREE NUMBER: 00800 - 67 10 83 00

for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom

 Please note some (mobile) phone services/provider do not permit access or request an additional prefix to +800 numbers.

For all not listed European Countries and in case that you can't get connected to the above mentioned number please make use of the following

CHARGED NUMBERS: +49 180 5 - 67 10 83 or +49 40 - 237 73 899
Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)