



## Slimline Caller ID Phone Model FM-2517

FCC and telephone company information

FCC Part 68 and ACTA

A

A

would always be followed in velocite to the risk of fire, success already leadings, blacking but between great and the property of the propert

[Montant safety instructions Some of the precautions below may not apply to yo product, e.g.: Battery and power cord precautions.

social socialization of the investigation. Fig. 100 ms for some of the proportion component of the proportion comp

Important battery precautions

• Use only the type of battery specified in this user man


• Batteries may present a risk of fire, explosion, or chem
if abused. Do not try to charge a battery that is not inte

## SAVE THESE INSTRUCTIONS







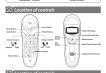

Replace the covers.
 Re-connect the line cord to the modular wall just.
 NOTE:
 Do not mix old and new batteries.
 If you will not be using the phone for a long period of time, remove the batteries to resource processible bealence and correction.

DESK MOUNTING

The handset and base as s

Coll cord just (handar)







MPORTANT: Do not connect the telephone into the wall jack while setting up the Caller ID menu because an incoming cal may invalidate the information not yet saved.

1. Press and hold the [dial] button until the display shows

"SET ◀ OR ▶".

"SET 4 OR >"."

Let the 1/4 or 1/7 buttons to scroll through the options below, and press the (Sell) button to select the desired option you wish to sel.

\*\*DATETIME\*\*

\*\*LOCAL AREA CODE\*\*

\*\*RECIONAL AC"5-1

\*\*SELECT LANGUAGE\*\*

\*\*TP DIAL MIXODE\*\*

\*\*EXT SETUP

DATE AND TIME

The date and time is programmed automatically when the first Caller ID record is received. It is also possible to set the date and time manually if destined.

1. Press and held the (felall) button until the display shows

"SET 4 OR >"."

LOCAL AREA CODE

1. Press and hold the [dial] button until the display shows "SET \* OR \* ".

2. Use the [.4] or (\*) Tubutions and select "LOCAL AREA CODE and press the [dial] button to erist.

3. Use the (\*) button to select the first digit and press the [.4] button to contain and key to the next digit.

4. Use the [dialete] button to edit, and press the [dial] button to confirm.

confirm.
Use the same method to set the rest of the digits. Up to 6 regional area codes may be programmed.

OTE: You can also use the keypad to set the regional area.

SELECT LANGUAGE
This setting allows you to choose the

I. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".

TONE / PULSE DIAL MODE

Thoose forms of Pulsa dailing.

Press and hold the [dial] button until the display shows

"SET 4 OR P".

Let she (a) or IV] buttons and select "TIP DIAL MODE" and
press the [dial] button to enter.

Let (a) or IV] buttons to select the desired dial mode.

Press the [dial] button to contim.

EXIT SETUP
When "EXIT SETUP" is displayed press the [dial] button exit



ADJUSTING THE HANDSET VOLUME



REDIAL

FLASH

ro answer an incoming call white having a conversation: After you hear the Call Waiting tone, press and release the [fla-batten. The first call is placed on hold and the second call is answered. To return to the first call and put the second call on hold: Press and release the (flash) button again to return to the first call, the second call will be put on hold.

To activate Three Way Calling:
Press and release the (flash) button while on the first call, you will hear a dial tone. Dial a second number, and press the (flash) button again to connect the two calls.

NOTE: Use the [redial] button to insert a pause when a dalay is needed in an automatic dialing sequence.

from the keyped.

4. Preas the [memo] button to confirm the memory location, press
the [memo] button again to confirm the number, and press the
[memo] button a third time to confirm the name and sixt.

Caller ID

10: 15"07 12 = 2.08 7 18-555- 1234 JOHN SMITH

Deleting Caller ID information

1. Use the [A] or (\*\*) buttons to select the caller info wish to delete.

2. Pleas the [delete] button.

Caller ID display messages

Troubleshooting tips

Anote pating it has insurgenerate electrical noise for example; mours
large, and in the pating it is not to the pating it is not p

Troubleshooding Ups

Re dat less

Re dat les THE WAY OF (®)

Warranty information
 ■ Marranty inf

Include a vector a stelephone contact number, and the package.

Describe the defect or reason you are returned to the package.

Very product will be repaired or replaced, at our package are package and the package are package.

Southern Telecom Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

( 1-877-768-8483 (Toll Free)

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST) or via e-mail at ☑ cs@southerntelecom.com

**⑤** Emerson₃